

Océ|User manual

Océ VarioPrint® 1055/65/75

Configuration and maintenance manual



Océ-Technologies B.V.

Copyright

© 2006, Océ-Technologies B.V. Venlo, The Netherlands.

All rights reserved. No part of this work may be reproduced, copied, adapted, or transmitted in any form or by any means without written permission from Océ.

Océ-Technologies B.V. makes no representation or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose.

Further, Océ-Technologies B.V. reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation to notify any person of such revision or changes.

Trademarks

List of trademarks

Océ, Océ VarioPrint® 1055/65/75 are registered trademarks of Océ-Technologies B.V..

Adobe®, Acrobat®, Reader® and Distiller® are registered trademarks of Adobe® Systems Incorporated.

PostScript® 3™ is a registered trademark of Adobe® Systems Incorporated.

Apple®, Mac®, Mac OS® and Macintosh® are registered trademarks of Apple® Computer, Inc.

InstallShield® is a registered trademark of InstallShield® Software Corporation.

FLEXlm™ is a trademark of Macrovision™ Corporation.

Microsoft®, Windows®, Windows NT®, Windows 98®, Windows 2000®, Windows XP®, Windows Server 2003® are either registered trademarks or trademarks of Microsoft® Corporation in the United States and/or other countries.

Products in this publication are referred to by their general trade names. In most, if not all cases, these designations are claimed as trademarks or registered trademarks of their respective companies.

Copyright

© 2006, Océ-Technologies B.V. Venlo, The Netherlands.

All rights reserved. No part of this work may be reproduced, copied, adapted, or transmitted in any form or by any means without written permission from Océ.

Océ-Technologies B.V. makes no representation or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose.

Further, Océ-Technologies B.V. reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation to notify any person of such revision or changes.

Notes for the reader

Introduction

This manual helps you to use the Océ VarioPrint® 1055/65/75 . The manual contains a description of the Océ VarioPrint® 1055/65/75 and guidelines to use and operate the Océ VarioPrint® 1055/65/75 . There are also tips to increase your knowledge of the Océ VarioPrint® 1055/65/75 and to help you manage the workflow even better.

Definition

Attention Getters

Parts of this manual require your special attention. These parts provide important, additional information or are about the prevention of damage to your properties.

Note, Attention and Caution

The words **Note**, **Attention** and **Caution** indicate these important parts.

- The word **Note** comes before additional information about the correct operation of the Océ VarioPrint® 1055/65/75 or a tip.
- A part marked with **Attention** contains information to prevent damage to items, for example the Océ VarioPrint® 1055/65/75 , an original or a file.
- A part marked with **Caution** contains information to prevent personal injury. **Caution** is found only in manuals that describe physical products.

Safety information

The safety information for this product is included in a separate manual with the title **Safety manual**. This manual is part of the documentation set that you received with your product.

Table of Contents

Chapter 1

Introduction	9
Your Océ product.	10
What is in the Configuration and Maintenance Manual	11
Who are the Océ VarioPrint® 1055/65/75 users	13
More information on the Océ VarioPrint® 1055/65/75	14

Chapter 2

Getting to know the Network Printer	15
The machine parts	16
Maintenance and configuration on the Network Printer	20
The operator panel of the Network Printer	21

Chapter 3

Getting to know the Digital Copier	23
The machine parts	24
Maintenance and configuration on the Digital Copier	28
The operator panel of the Digital Copier	29

Chapter 4

The Key operator system	31
Enter or quit the key operator system	32
Changing the PIN of the Key Operator	34

Chapter 5

Getting Started	35
Turn the machine on and off for daily use	36
Enter the IP address information of the Network Printer	38

Chapter 6

The end-user display screen	41
Change or restore the default job settings	42
Change the display language	44
Changing the Default Reset Time	45
Enter the telephone number of the key operator	47
Change the stapler empty mode	48

Chapter 7

Access security 49

- Access security of the Network Printer 50
 - About the access-secured system of the Network Printer. 50
 - Secure the access to the Network Printer machine 52
 - Secure automatic printing 54
 - Defining the job charges of the Network Printer 56
 - Enable the Copy control device connected to the Network Printer . . . 58
- Access security of the Digital Copier 60
 - About the access-secured system of the Digital Copier 60
 - Secure the access to the Digital Copier machine 62
 - Defining the job charges of the Digital Copier. 64
 - Enable the Copy control device connected to the Digital Copier 66

Chapter 8

Access to the machine components 69

- Control the access to the paper trays 70
- Control the access to the special feeder 72

Chapter 9

Page and paper settings 75

- Define the paper trays for the report jobs. 76
- Define the folio size 78
- Link the paper trays 79
- Change the default margin shift 81
- Control the output of copy jobs from platen 82

Chapter 10

The interrupt mode 83

- Disable the Interrupt function 84

Chapter 11

The print and scan mode of the Network Printer 85

- Define the default operating mode of the Network Printer 86
- Define the banner pages 87
- Defining the Mailbox Input 89
 - About the mailbox 89
 - Control the automatic print jobs. 91
 - Controlling jobs without an Océ job ticket 92
- Controlling the Time Delay for Print Jobs 93
 - About the printing delay. 93
 - Define the printing delay for the automatic print jobs 94

Chapter 12

The system information 97

Reading Job-page Counters	98
Check the machine memory	100
Check the machine number	101
Print the system information of the Network Printer	102
Printing system reports	102
Print the accounts-database file	103
Chapter 13	
Energy save timers	105
The Energy save timers of the Network Printer	106
About the energy save modes of the Network Printer	106
Set the energy save timers of the Network Printer	107
Disable the sleep mode timer of the Network Printer	109
The Energy save timers of the Digital Copier	110
About the energy save modes of the Digital Copier	110
Set the energy save timers of the Digital Copier	111
Disabling the automatic switch off	113
Chapter 14	
The Accounting system	115
About the accounting system	116
About the system accounts	117
Create the user accounts	118
A valid user account	118
Creating a new user account record on the Network Printer	119
Creating a new user account record on the Digital Copier	120
Maintaining the Accounts Database	121
Change the account number	121
Assign or change a PIN	122
Changing the Status	123
Defining the Job-page Limit	124
Change the sequence of the user accounts	125
Reset the job-page counters	126
Delete the user accounts	128
Chapter 15	
Maintain the machine	131
Add the toner	132
Add the staples	135
Empty the staple receptacle	138
Clean the Océ VarioPrint® 1055/65/75	139
Shut down the Network Printer system	140
Shut down the Digital Copier system	141
Replace the removable hard disk	142

Chapter 16

Clearing paper jams 145

 Clearing paper jams 146

 Clear the staple jams 148

Chapter 17

Troubleshooting for the Network Printer 149

 Stop automatic printing 150

 Change the account-log mode 151

 Restart the controller 153

 Delete the jobs 154

 Restoring the Network Settings 155

Appendix A

Specifications 157

 Product Specifications 158

 Input Trays and Output Bins 159

 Originals to use 162

 Media 163

Appendix B

Addresses 165

 Addresses of local Océ organisations 166

Chapter 1

Introduction



Your Océ product

The Océ VarioPrint® 1055/65/75 product range

The Océ VarioPrint® 1055/65/75 product range includes different products and configurations.

The Océ VarioPrint® 1055/65/75 can be a Network Printer or a Digital Copier.

- The Network Printer has a network connection and can be used for copy, print and scan jobs.
- The Digital Copier does not have a network connection and can be used for copy jobs.

Océ VarioPrint®	Print speed (pages / minute)	Products	Configurations	Designed for
1055	55	All-in-one printer, scanner and copier	Network Printer	■ All kinds of print, scan and copy jobs
			Digital Copier	■ All kinds of copy jobs
		Bookcopier	Network Printer	■ Book copying and book scanning in a simple and handy way ■ All kinds of print, scan and copy jobs
			Digital Copier	■ Book copying in a simple and handy way ■ All kinds of copy jobs
1065	65	All-in-one printer, scanner and copier	Network Printer	■ All kinds of print, scan and copy jobs
			Digital Copier	■ All kinds of copy jobs
1075	75	All-in-one printer, scanner and copier	Network Printer	■ All kinds of print, scan and copy jobs
			Digital Copier	■ All kinds of copy jobs


What is in the Configuration and Maintenance Manual

Introduction

The Configuration and Maintenance Manual describes the tasks that the Key operator can do with the Key Operator System. The tasks are explained in step-by-step instructions with many illustrations to make the steps clear. But this manual also provides some practical background information on functions you or the end-users want to use.

Configurations and products of the Océ VarioPrint® 1055/65/75











The Océ VarioPrint® 1055 products can differ in functions and machine parts (see [‘Your Océ product’ on page 10](#)).













This Configuration and maintenance manual uses a special symbol  when information is related to special products or configurations.

The Configuration and maintenance manual for your Océ VarioPrint® 1055/65/75

The Océ VarioPrint® 1055/65/75 has a Network Printer or Digital Copier configuration (see [‘Your Océ product’ on page 10](#)).

The following tables describes which chapters and topics of the Configuration and maintenance manual specifically apply to the Network Printer and Digital Copier.

Chapter or topic	Network Printer	Digital Copier
Getting to know the Network Printer		
Getting to know the Digital Copier		
The access security of the Network Printer		
The access security of the Digital Copier		
The network settings of the Network Printer		

Chapter or topic	Network Printer	Digital Copier
The print and scan mode of the Network Printer		
Print the system information of the Network Printer		
The Energy save timers of the Network Printer		
The Energy save timers of the Digital Copier		
Troubleshooting for the Network Printer		
Replace the removable hard disk		

Who are the Océ VarioPrint® 1055/65/75 users

Introduction

The Océ VarioPrint® 1055/65/75 documentation is meant for three types of users. Each user has defined tasks related to the Océ VarioPrint® 1055/65/75 system. This Configuration and maintenance manual describes the tasks of the Key operator.

Types of users and their tasks

Types of users	Tasks
End user	<ul style="list-style-type: none"> ■ Print documents from computer or USB stick. ■ Copy paper documents. ■ Scan paper documents to a server, a USB stick or Email address. ■ Add paper to the paper trays ■ Clear paper jams.
Key operator	<p>Uses the Key Operator System to:</p> <ul style="list-style-type: none"> ■ Define access-security to machine and the machine's components. ■ Set the default job settings. ■ Control the paper trays. ■ Control the output. ■ Control the print mode. ■ Obtain the system information. ■ Set energy save timers. ■ Maintain the Accounting system. <p>Performs the following maintenance tasks:</p> <ul style="list-style-type: none"> ■ Maintain the machine supplies. ■ Solve easy machine problems.
System administrator	<p>Uses the Océ System Configuration application to:</p> <ul style="list-style-type: none"> ■ Control the connection of the system to the network. ■ Configure the scan server. ■ Configure the print server. ■ Configure print protocols. ■ Configure the print languages. ■ Maintain the accounts database. ■ Create scan profiles.

More information on the Océ VarioPrint® 1055/65/75

Introduction

Océ develops manuals, instruction cards, tutorials and on-line helps to help you with your jobs on the Océ VarioPrint® 1055/65/75 .

Where to find the Océ VarioPrint® 1055/65/75 documentation

The user CD-rom, delivered with the Océ VarioPrint® 1055/65/75 , provides you with the user manuals in digital format. You can also find instruction cards and tutorials on this CD-rom.

The Océ Web site, www.oce.com, makes viewing manuals on-line and downloading documents easier.

Océ VarioPrint® 1055/65/75 documentation for each type of user

Types of users	Information
End user	<ul style="list-style-type: none">■ The Océ VarioPrint® 1055/65/75 Job Manual.■ Instruction cards which explain copy, print and scan jobs in a way that is easy to understand.■ Add paper card, which explains how to add paper to the trays and special feeder.■ Tutorials, which explain smart functions from your computer screen.
Key operator	<ul style="list-style-type: none">■ The Océ VarioPrint® 1055/65/75 Configuration and Maintenance Manual.■ Maintenance card, which explains how to add toner and staples.
System administrator	<ul style="list-style-type: none">■ The System administrator manual.

Chapter 2

Getting to know the Network Printer




The machine parts


The machine parts of the Océ VarioPrint® 1055/65/75

The following illustrations show which parts of the machine are involved with the jobs you want to do. You see two illustrations:

- the parts of the Océ VarioPrint® 1055/65/75 all-in-one printer, scanner and copier
- the parts of the Océ VarioPrint® 1055 Bookcopier

The Océ VarioPrint® 1055/65/75 machine


: You can have an Océ VarioPrint® 1055 without an automatic document feeder or a finisher.

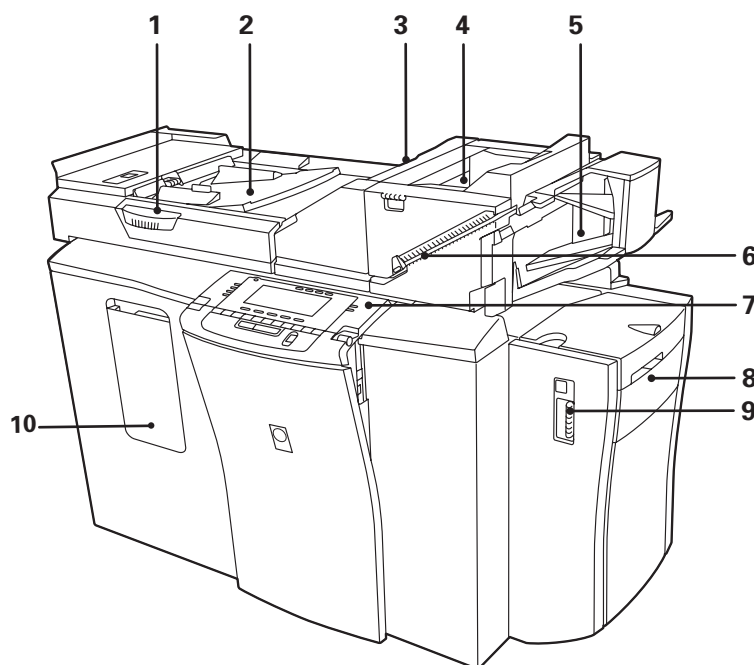

Number	Part	Description
1	Access to platen	You can place originals that the automatic document feeder cannot handle on the platen. One side of the original is scanned.
2	Automatic document feeder	You can place a set of 1-sided or 2-sided originals in the automatic document feeder.
3	Original receiving bin	The originals are collected on this bin.
4	Multi-size bin	Copies and prints with special paper sizes or paper weights are collected in this bin. Stapling is not possible.
5	Finisher	The A4/Letter 8.5x11 copies and prints are collected on the finisher. Stapling is possible.
6	Off-line stapler	You can staple your copies and prints manually with this stapler.
7	Operator panel	The operator panel allows you to define the settings for the job.

Number	Part	Description
8	Special feeder	You can use the special feeder to insert special material that the paper trays cannot handle.
9	Paper compartment door	Door to access the paper trays.
10	Front door	Door to access the toner reservoir and the machine counter.

The Océ VarioPrint® 1055 Bookcopier

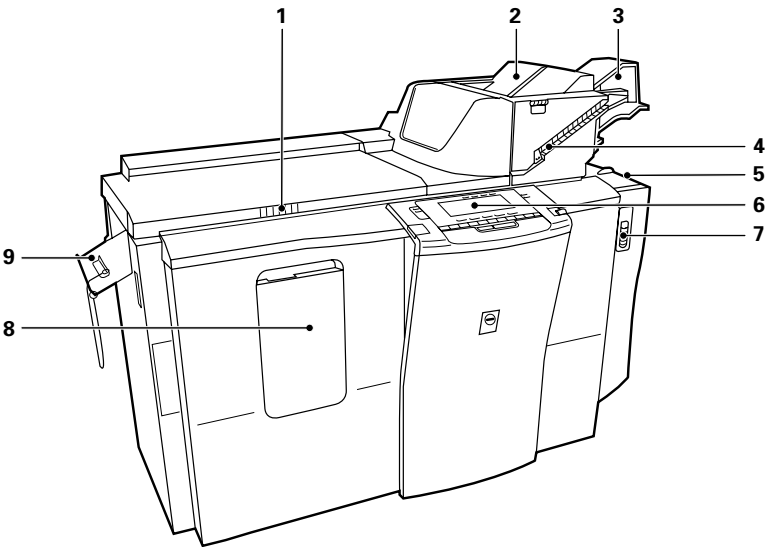

Number	Part	Description
1	Access to book platen	You can place originals that the automatic document feeder cannot handle on the book platen. One side of the original is scanned.
2	Multi-size bin	The copies and prints with a special paper size or paper weight are collected on this bin. Stapling is not possible.
3	Finisher	The A4/Letter 8.5x11 copies and prints are collected on this bin. Stapling is possible.
4	Off-line stapler	You can staple your copies and prints manually with this stapler.

Number	Part	Description
5	Special feeder	You can use the special feeder to insert special material that the paper trays cannot handle.
6	Operator panel	The operator panel allows you to define the settings for the job.
7	Paper compartment door	Door to access the paper trays.
8	Front door	Door to access the toner reservoir and the machine counter.
9	Sloping side panel	The sloping side panel keeps the opened book in place.

Maintenance and configuration on the Network Printer

Introduction

The Network Printer is a copier and scanner, but most of all it is a printer. It offers the same functions any desktop printer offers, and lots more. The operator panel is user friendly and easy to operate.

You as Key operator are responsible for the machine supplies and the configuration of the system through the Key operator system (see *'Who are the Océ VarioPrint® 1055/65/75 users' on page 13*). You need a password to enter the Key operator system.


What to do as a Key operator of Network Printer

As a Key operator you are responsible to set the initial configuration. You are advised to read this manual carefully to decide which settings are important for your organization or department.

Remember that most of the network, server and security configuration must be done through the Océ System configuration. Refer to the System Administration Manual how to use the Océ System Configuration (see *'More information on the Océ VarioPrint® 1055/65/75' on page 14*).


Applications


 




There are two applications to configure the Network Printer.

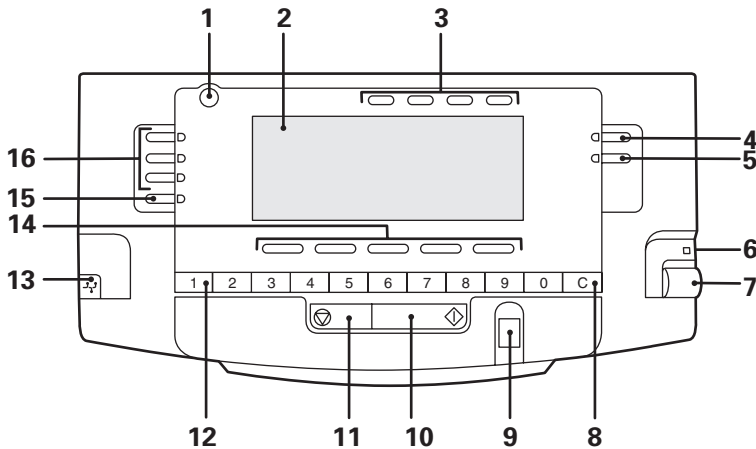


Applications	Description
Key operator system	The display screen provides access to the Key operator system. You need a Key operator password to open the Key operator system.
Océ System Configuration	The web based Océ System Configuration provides the settings for the system, machine and network configuration. You need a System administrator password to start the application. <div> Note: <i>There are settings that can be found in both the Key operator system and the Océ System Configuration application.</i></div>

The operator panel of the Network Printer

The parts of the operator panel



Number	Part	Description
1	Screen brightness button 	You can adjust the brightness of the screen.
2	Display screen	The display screen shows the settings and the messages.
3	Top keys	Use the keys to: <ul style="list-style-type: none"> ■ Select a collection of settings. ■ Do a task.
4	Status and system key 	Use the key to: <ul style="list-style-type: none"> ■ Check the level of the toner, paper and staples. ■ Go to the Key operator system.
5	Help key	Key that opens the Help topics.
6	Scroll wheel key 	Key to open a series of settings. You can use the key after you select an item with the scroll wheel.
7	Scroll wheel  or 	Use the scroll wheel to go to an item in a list. If the displays shows the  icon, you can press the scroll wheel key to open a series of settings after you select an item.

Number	Part	Description
8	Correction key 	Use the key to: <ul style="list-style-type: none">■ Reset the number of sets to 1 (copy jobs) or the value as defined in the printer driver (print jobs).■ Delete the last digit when you enter a code.
9	Fingerprint sensor	Use the sensor for TouchTo Print (fingerprinting).
10	Start key 	Use the key to: <ul style="list-style-type: none">■ Starting a job.■ Confirm the changes.
11	Stop key 	Use the key to: <ul style="list-style-type: none">■ Stop a job.■ Finish your jobs if you must enter a PIN to get access to the settings. If you do not stop the job with the Stop key, another user could process jobs that are charged to your user account.
12	Numeric keys	Use the keys to: <ul style="list-style-type: none">■ Enter a code or a PIN.■ Entering the number of sets.
13	USB port	Use the USB port to insert a USB stick (Pocket mailbox function).
14	Bottom keys	Use the keys to: <ul style="list-style-type: none">■ Select a collection of settings.■ Do a task.■ Select a value or a function.
15	Wizards key	Use the key to go to the wizards.
16	Main keys	The Network Printer has several main keys. <ul style="list-style-type: none">■ The 'Print' key to go to the print settings.■ The 'Copy' key to go to the copy settings.■ The 'Scan' key to go to the scan settings.

Chapter 3

Getting to know the Digital Copier




The machine parts


The machine parts of the Océ VarioPrint® 1055/65/75

The following illustrations show which parts of the machine are involved with the jobs you want to do. You see two illustrations:

- the parts of the Océ VarioPrint® 1055/65/75 all-in-one printer, scanner and copier
- the parts of the Océ VarioPrint® 1055 Bookcopier

The Océ VarioPrint® 1055/65/75 machine


: You can have an Océ VarioPrint® 1055 without an automatic document feeder or a finisher.

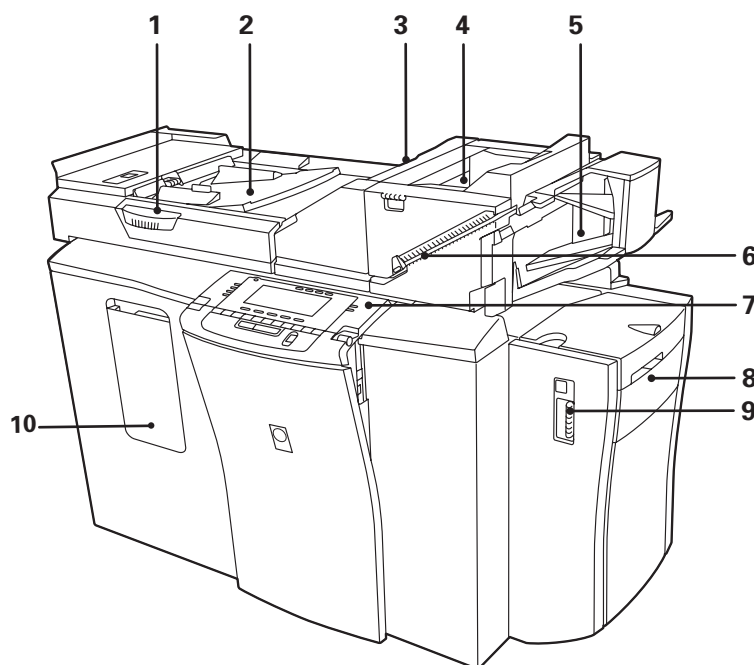

Number	Part	Description
1	Access to platen	You can place originals that the automatic document feeder cannot handle on the platen. One side of the original is scanned.
2	Automatic document feeder	You can place a set of 1-sided or 2-sided originals in the automatic document feeder.
3	Original receiving bin	The originals are collected on this bin.
4	Multi-size bin	Copies and prints with special paper sizes or paper weights are collected in this bin. Stapling is not possible.
5	Finisher	The A4/Letter 8.5x11 copies and prints are collected on the finisher. Stapling is possible.
6	Off-line stapler	You can staple your copies and prints manually with this stapler.
7	Operator panel	The operator panel allows you to define the settings for the job.

Number	Part	Description
8	Special feeder	You can use the special feeder to insert special material that the paper trays cannot handle.
9	Paper compartment door	Door to access the paper trays.
10	Front door	Door to access the toner reservoir and the machine counter.

The Océ VarioPrint® 1055 Bookcopier

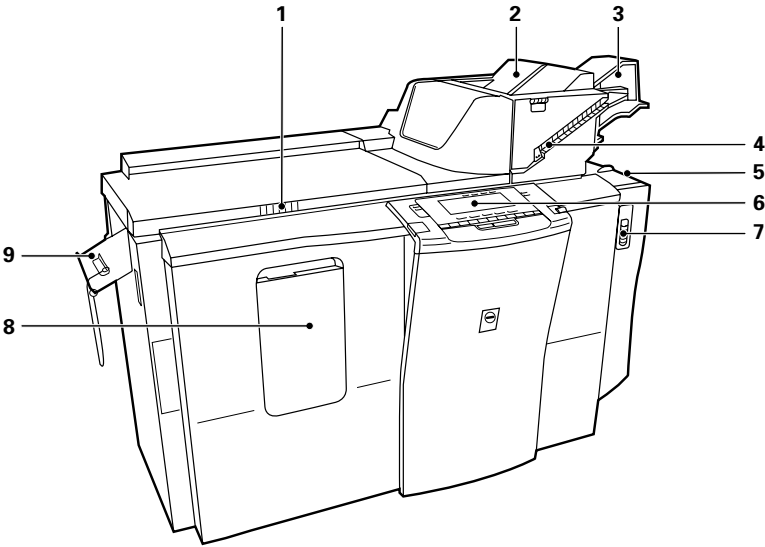

Number	Part	Description
1	Access to book platen	You can place originals that the automatic document feeder cannot handle on the book platen. One side of the original is scanned.
2	Multi-size bin	The copies and prints with a special paper size or paper weight are collected on this bin. Stapling is not possible.
3	Finisher	The A4/Letter 8.5x11 copies and prints are collected on this bin. Stapling is possible.
4	Off-line stapler	You can staple your copies and prints manually with this stapler.

Number	Part	Description
5	Special feeder	You can use the special feeder to insert special material that the paper trays cannot handle.
6	Operator panel	The operator panel allows you to define the settings for the job.
7	Paper compartment door	Door to access the paper trays.
8	Front door	Door to access the toner reservoir and the machine counter.
9	Sloping side panel	The sloping side panel keeps the opened book in place.

Maintenance and configuration on the Digital Copier

Introduction

The Digital Copier is a copier. The operator panel is user friendly and easy to operate.


You as Key operator are responsible for the machine supplies and configuration of the system through the Key operator system. You need a password to enter the Key operator system.


 




What to do as a Key operator of the Digital Copier

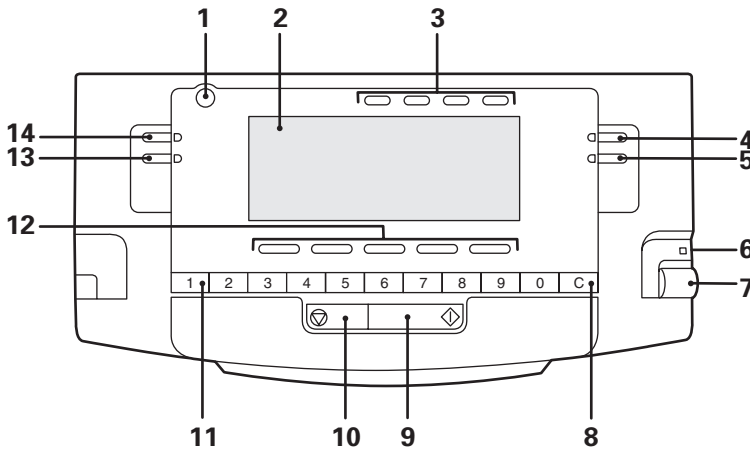


As a Key operator you are responsible to set the initial configuration. You are advised to read this manual carefully to decide which settings are important for your organization or department.

The operator panel of the Digital Copier

The parts of the operator panel



Number	Part	Description
1	Screen brightness button 	You can adjust the brightness of the screen.
2	Display screen	The display screen shows the settings and the messages.
3	Top keys	Use the keys to: <ul style="list-style-type: none"> ■ Select a collection of settings. ■ Do a task.
4	Status and system key 	Use the key to: <ul style="list-style-type: none"> ■ Open the supply information screen. ■ Go to the Key operator system.
5	Help key	Key to open the help topics.
6	Scroll wheel key 	Key to open a series of settings. You can use the key after you select an item with the scroll wheel.
7	Scroll wheel  or 	Use the scroll wheel to go to an item in a list. When the display shows the  icon, you can use the scroll wheel key to open a series of settings after you select an item.

Number	Part	Description
8	Correction key 	Use the key to: <ul style="list-style-type: none">■ Reset the number of sets to 1.■ Delete the last digit when you enter a code.
9	Start key 	Use the key to: <ul style="list-style-type: none">■ Starting a job.■ Confirm the changes.
10	Stop key 	Use the key to: <ul style="list-style-type: none">■ Stop a job.■ Finish your jobs if you must enter a PIN to get access to the settings. If you do not stop the job with the Stop key, another user could process jobs that are charged to your user account.
11	Numeric keys	Use the keys to: <ul style="list-style-type: none">■ Enter a code or a PIN.■ Entering the number of sets.
12	Bottom keys	Use the keys to: <ul style="list-style-type: none">■ Select a collection of settings.■ Do a task.■ Select a value or a function.
13	Wizards key	Use the key to go to the wizards.
14	Copy key	Use the key to go to the copy settings.

Chapter 4

The Key operator system



Enter or quit the key operator system

Introduction


The key operator system contains the settings to change, or restore, the default configuration of the Océ VarioPrint® 1055/65/75 .

You can enter the Key operator system when the Océ VarioPrint® 1055/65/75 does not process a job. A PIN is necessary to access the Key operator system. The changes you did, are applied after you have left the Key operator system.


Before you begin

Make sure that the Océ VarioPrint® 1055/65/75 does not process or announce a job.


Illustration

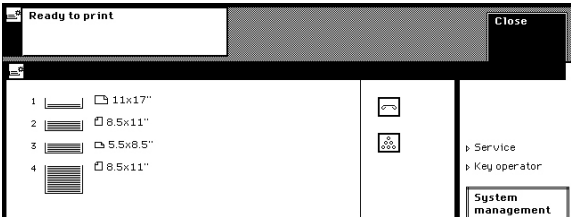

[29] Go to the Status and system screen

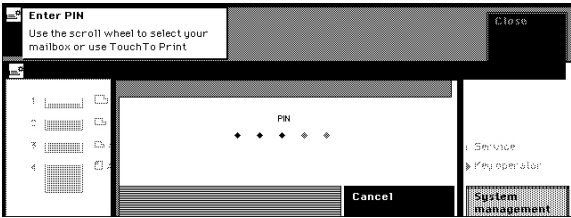



[30] Enter the Key Operator System with a PIN

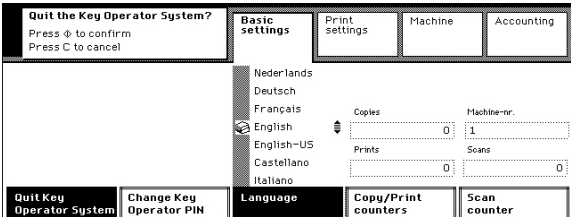


[31] Quitting the Key Operator System

 Entering the Key Operator System

1. Press the Status and system key .
2. Press the 'System management' function key.
3. Select 'Key operator'.
4. Press the Start key .
5. Use the numeric keys to enter the Key operator PIN.

Quitting the key operator system

1. Press the 'Basic settings' key.
2. Press the 'Quit Key Operator System' function key.
3. Press the Start key .

Changing the PIN of the Key Operator


Introduction

The Key Operator has a default PIN to access the Key Operator System on the machine. You can change the default PIN if you want to use a different PIN.

Before you begin


Enter the Key operator system (see [‘Enter or quit the key operator system’](#) on [page 32](#)).

Illustration

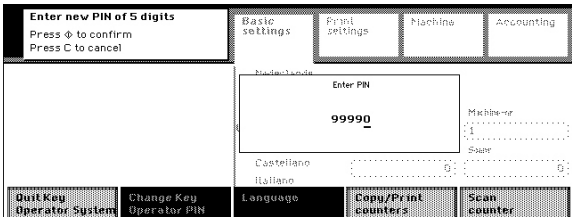

[32] Change the Key operator PIN

Changing the PIN of the Key Operator

1. Press the 'Basic settings' key.
2. Press the 'Change Key Operator PIN' key.
3. Use the numeric keys to enter a unique 5-digit PIN.
4. Press the start key  to confirm.

Check

1. Print the accounts-database file or go to the list of accounts.
2. Make sure that you remember or find the PIN to re-open the Key operator system.

Chapter 5

Getting Started



Turn the machine on and off for daily use

Introduction

The machine has the following buttons.

- ON / OFF button with green LED.

The ON / OFF button allows you to start the machine to do jobs. You can only turn on or off the machine if the power switch is in 'I' position and the start-up phase was done. You can turn off and then back on the machine with the ON / OFF button in particular circumstances, for example to correct an error. The system requires 8 minutes to reach the operating temperature. When the machine is ready, a message is displayed.


- Power switch.

You can find the power switch at the left flank of the machine. The power switch cuts and connects the power to the complete system (the machine and if available the controller). Do not use the power switch to turn on and off the machine for daily use (see *'Shut down the Digital Copier system' on page 141*)(see *'Shut down the Network Printer system' on page 140*).


Before you begin

The Océ VarioPrint® 1055/65/75 can have a key switch to protect access. If there is a lock available, check to see if key is available.

Illustration

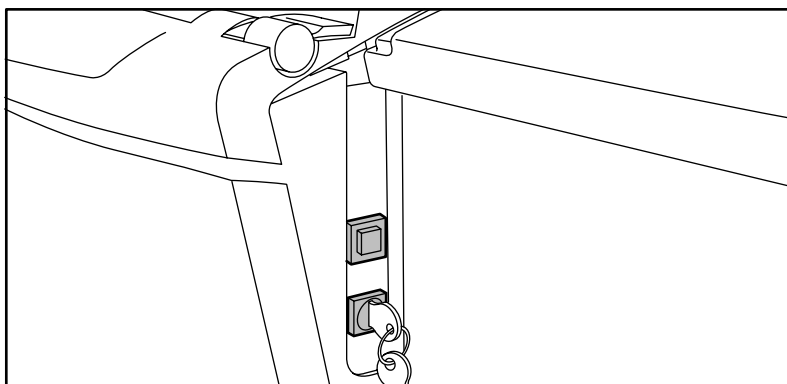

[33] The ON / OFF button

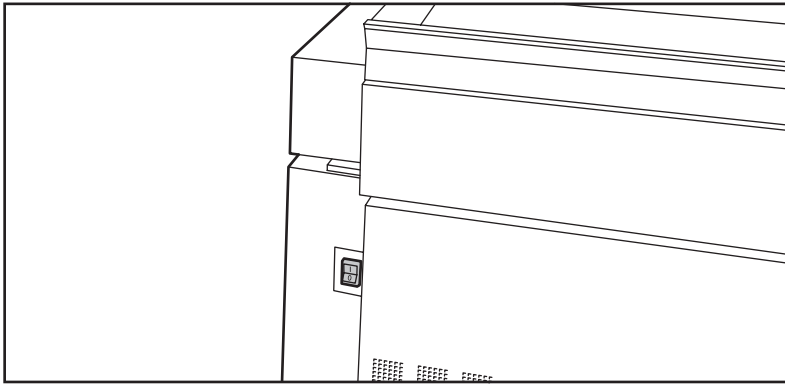

[34] The power switch

How to turn the Océ VarioPrint® 1055/65/75 on or off

1. Make sure that the power switch is in the 'I' position.
2. Turn the key to the right in the horizontal position, if a key switch is available.
3. Press the green ON / OFF button.

Enter the IP address information of the Network Printer

Introduction


To configure the IP address information, you can use the Key Operator System and the Océ System Configuration.

You can configure the IP address statically or dynamically through BootP or DHCP.


Before you begin

Enter the Key operator system ([see ‘Enter or quit the key operator system’ on page 32](#)).

Illustration

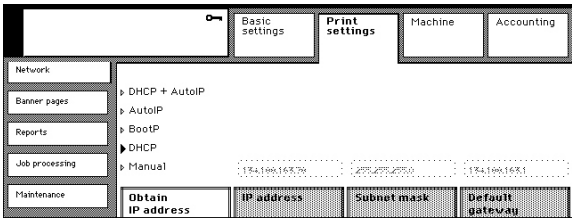

[35] Obtain the IP address

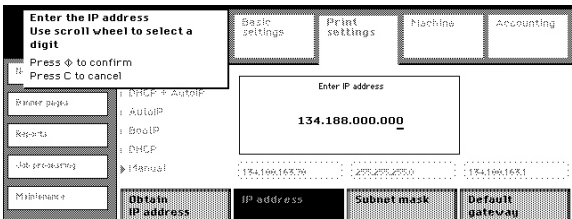


[36] Enter the IP address

How to change the IP address information


1. Press the 'Print settings' key.
2. Select the 'Network' tab.
3. Press the 'Obtain IP address' key to select the address assignment.

Address assignment	Result
'Manual'	The IP address must be entered manually in the 'IP address' box.
'Use DHCP'	DHCP is used to obtain the IP address.
'Use BootP'	BootP is used to obtain the IP address.
'AutoIP'	AutoIP is used to obtain the IP address.
'DHCP and AutoIP'	Both AutoIP and DHCP are used to obtain the IP address.


Defining the IP address manually

1. Press the 'Print settings' key.
2. Select the 'Network' tab.
3. Check that 'Manual' is selected in the 'Obtain IP address' box.
4. Press the IP address key.
5. Use the numeric keys to enter the IP address. You can use the scroll wheel to navigate.
6. Press the start key  to confirm the IP address.

How to define the Subnet mask manually

1. Press the 'Print settings' key.
2. Select the 'Network' tab.
3. Check that 'Manual' is selected in the 'Obtain IP address' box.
4. Press the 'Subnet mask' key.
5. Use the numeric keys to enter the Subnet mask. You can use the scroll wheel to navigate.
6. Press the start key  to confirm the Subnet mask.

How to define the Default gateway manually

1. Press the 'Print settings' key.
2. Select the 'Network' tab.
3. Check that 'Manual' is selected in the 'Obtain IP address' box.
4. Press the 'Default gateway' key.
5. Use the numeric keys to enter the Default gateway. You can use the scroll wheel to navigate.
6. Press the start key  to confirm the Default gateway.

Chapter 6

The end-user display screen



Change or restore the default job settings

Introduction


The Océ VarioPrint® 1055/65/75 has a collection of job settings, defined by Océ.

You can change the Océ settings, according to the requirements of your company or department. The Océ VarioPrint® 1055/65/75 allows you to recover the Océ defined settings, at your convenience.


Before you begin

- 1. When defining the company or department settings, first define the required job settings in the available operating modes.
- 2. Enter the Key operator system ([see 'Enter or quit the key operator system' on page 32](#)).

Illustration

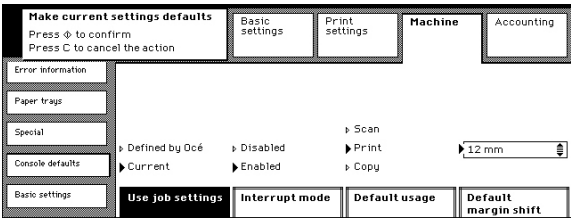


[37] Save the current job settings

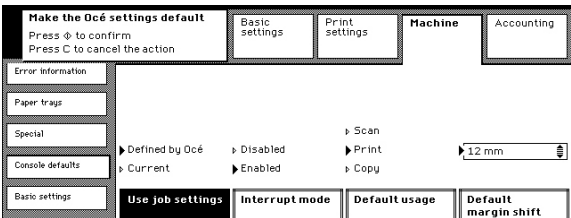


[38] Restore the default Océ settings

Changing the default job settings

- 1. Press the 'Machine' key.
- 2. Select the 'Console defaults' tab.
- 3. Press the 'Use job settings' key to select 'Current'.
- 4. Press the start key  to confirm.

Restoring the default job settings

1. Press the 'Machine' key.
2. Select the 'Console defaults' tab.
3. Press the 'Use job settings' key to select 'Defined by Océ'.
4. Press the start key  to confirm.

Check

1. Exit the key operator system.
2. Check to insure that the default job settings are set for your needs.

Change the display language


Introduction

The Océ VarioPrint® 1055/65/75 allows you to select one of the 17 display languages.

Before you begin


Enter the Key operator system (see [‘Enter or quit the key operator system’ on page 32](#)).

Illustration

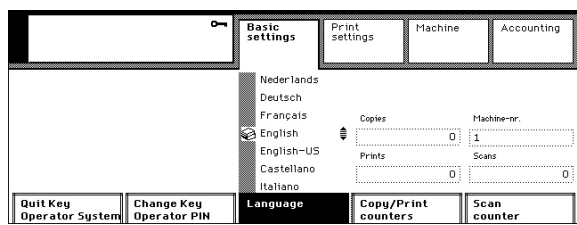

[39] Change the display language of the Océ VarioPrint® 1055/65/75 Network Printer

Changing the display language

1. Press the 'Basic settings' key.
 2. Make sure the 'Language' function is selected.
 3. Use the scroll wheel  to select the required language.
- The display language will be displayed immediately in the Key operator system.

Changing the Default Reset Time

Introduction

The reset time is the delay period, between the last user operation and the return to the default job settings.


A timer starts if the user presses a key, opens a door or places the originals. When the reset time has expired, the Océ VarioPrint® 1055/65/75 returns to the default operating mode and the default job settings are displayed. The user loses the changed settings.

The default reset time is 60 seconds, but you can set any other time from 10 seconds up to 5 minutes.

Before you begin


Enter the Key operator system (see [‘Enter or quit the key operator system’ on page 32](#)).

Illustration

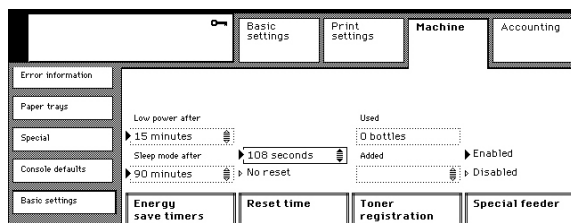

[40] Define the reset time

Changing the reset time

1. Press the 'Machine' key.
2. Select the 'Basic settings' tab.
3. Press the 'Reset time' key to select the series of values.
Use the scroll wheel  to adjust the reset time.

Disabling the reset time

1. Press the 'Machine' key.
2. Select the 'Basic settings' tab.
3. Press the 'Reset time' key to select 'No reset'.

Check

1. Quit the Key operator system.
2. Check to see that the reset time is set according to your purposes.
The Océ VarioPrint® 1055/65/75 must return to the default settings after the reset time has expired.
When 'No reset' is selected, the default settings will not be restored.

Enter the telephone number of the key operator

Introduction


If an error is reported, the Océ VarioPrint® 1055/65/75 asks the user to call the Key Operator. A telephone number can be a part of the message.

You can change or ignore the telephone number.

Before you begin


Enter the Key operator system (see [‘Enter or quit the key operator system’](#) on page 32).

Illustration

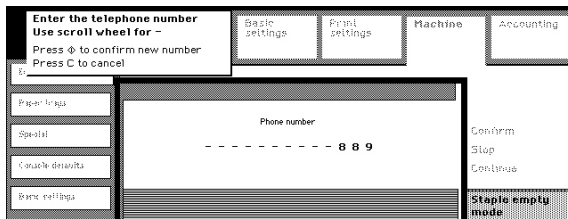


[41] Enter the Key operator telephone number of the Network Printer

Entering a key operator telephone number

1. Press the 'Machine' key.
2. Select the 'Error information' tab.
3. Press the 'Change phone number' key.
4. Use the numeric keys to enter a telephone number with a maximum of 13 digits.
5. Press the start key  to confirm the new number.

Ignoring a telephone number

1. Press the 'Machine' key.
2. Select the 'Error information' tab.
3. Press the 'Change phone number' key.
4. Press the start key  to ignore the telephone number.

Change the stapler empty mode


Introduction

When the stapler is empty a message is displayed. You can adjust the behavior of the machine when the stapler gets empty.

Before you begin

Enter the Key operator system ([see ‘Enter or quit the key operator system’ on page 32](#)).

Illustration

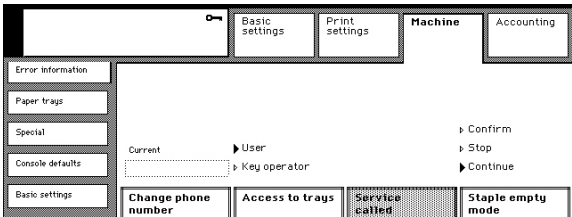

[42] Change the stapler empty mode

How to change the stapler empty mode

1. Press the 'Machine' key.
2. Select the 'Error information' tab.
3. Press the 'Stapler empty mode' key to change the stapler empty mode.

Stapler empty mode	Result
'Confirm'	When the stapler gets empty, a message is displayed. The user is asked whether the job must be continued without staples. For each job, this message will be repeated.
'Stop'	When the stapler gets empty, a message is displayed. To let your users continue their jobs, you must replace the stapler cartridge.
'Continue'	When the stapler gets empty, a message is displayed. All jobs will be done without staples.

Chapter 7

Access security



Access security of the Network Printer

About the access-secured system of the Network Printer

Introduction

An access-secured system allows you to perform the following tasks:

- Define which users can access the machine to start mailbox, copy and scan jobs.
- Define which user can perform automatic print jobs.
- Define the job-page limit for each user.
- Follow the number of job-page clicks the users have done.

To create an access-secured system, proceed as follows:

1. Secure the access to the machine.
When the access to the machine is secured, all authorized users need a unique PIN to enter the display menu. If the PIN is correct, the user can start mailbox, copy and scan jobs (see *'A valid user account' on page 118*).
2. Secure automatic printing (see *'Secure automatic printing' on page 54*).
3. Enter the accounting system. Define the authorization for each user or each user group (see *'About the accounting system' on page 116*).

To accept external users, a copy control device can be a part of the system.

Access-secured system

An access-secured system has the following properties:

Properties
The 'Access to machine' is 'Secured' (Key operator system) (see <i>'Secure the access to the Network Printer machine' on page 52</i>).
The authorized users have a PIN (Accounting system) (see <i>'Assign or change a PIN' on page 122</i>).
The authorized users have a valid user account (Accounting system) (see <i>'Change the account number' on page 121</i>).

Authorized users can use the machine until the job page limit of the user account is reached (Accounting system) (see *'Defining the Job-page Limit' on page 124*).

Secured automatic printing

Secured automatic printing has the following properties:

Properties
A new user can only print automatic jobs after that the status of the automatically created user account has been changed to '+' (Accounting system).
In order to check the user, manually authorize the user account.
The automatic print jobs come into the mailbox of the user if the user account record has not yet been authorized.

Security through the copy control device

Security through the copy control device has the following properties:


Properties
Océ Service must install and configure the Copy control device.
The access control for the Copy control device is set to 'Enabled' (Key operator system) (see <i>‘Enable the Copy control device connected to the Network Printer’ on page 58</i>).
The 'Access to machine' can be secured, so that the authorized, internal users can use a PIN instead of using coins or a credit card.

When automatic printing is not secured, each user with a network user name can print the automatic print jobs, without a charge.

Secure the access to the Network Printer machine

Introduction

The Océ VarioPrint® 1055/65/75 allows you to secure the access to the machine. If the machine is secured, the user must enter a unique PIN, to enter the display screen menu and to start the jobs ([see ‘About the access-secured system of the Network Printer’ on page 50](#)).

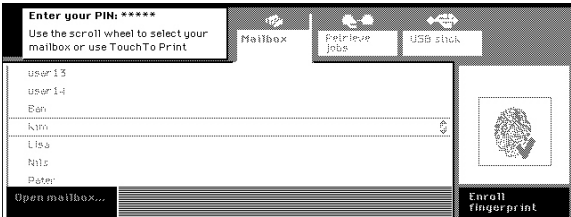


[43] Entry screen, when the access is secured

Before you begin

- 1. Enter the Key operator system ([see ‘Enter or quit the key operator system’ on page 32](#)).
- 2. Check that the authorized users have valid user accounts ([see ‘A valid user account’ on page 118](#)).

Illustration

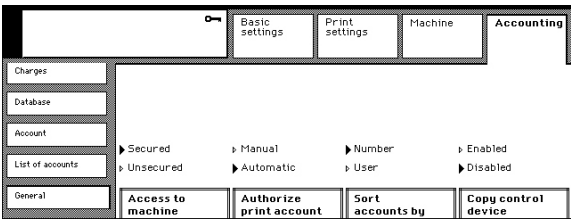

[44] Secure the machine-access

Defining machine security

1. Press the 'Accounting' key.
2. Select the 'General' tab.
3. Press the 'Access to machine' key to select 'Secured' or 'Unsecured'.

Access to machine	Result
Secured	<ul style="list-style-type: none">■ The user must have a PIN, to access the machine.■ The user account must be valid.■ You can secure automatic printing by using the 'Authorize print account' function (see 'Secure automatic printing' on page 54).
Unsecured	<ul style="list-style-type: none">■ Any user can access the machine.■ You can secure automatic printing by using the 'Authorize print account' function.

Check

1. Exit the key operator system.
2. Check to insure that the access is controlled according to your needs.

Secure automatic printing


Introduction

When the access to the machine is secured, the user must use a PIN to enter the display screen menu (see *'About the access-secured system of the Network Printer' on page 50*). In order to print a job that is stored in the mailbox, the user needs a PIN to enter the mailbox. When a user sends an automatic print job, the operator panel is not necessary to print the job. You can secure the automatic printing so that new users cannot print, unless you change the status of the user account manually.

Before you begin

- 1. Enter the Key operator system (see *'Enter or quit the key operator system' on page 32*).
- 2. Check that the access-security has been defined.

Illustration

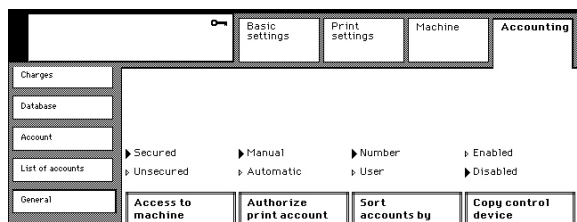

[45] Secure automatic printing

Defining the automatic printing security

- 1. Press the 'Accounting' key.
- 2. Select the 'General' tab.
- 3. Press the 'Authorize print account' key to select 'Manual' or 'Automatic'.

Authorize print account	Result
'Manual'	<ul style="list-style-type: none">■ When a user sends an automatic print job to the machine, a record is automatically added to the accounts database. To prevent unlimited printing, use the 'Manual' setting. The newly created user account records receive a '-' status, which means that the user accounts are not valid. The refused automatic print job is not printed and stored in the mailbox of the document owner. You must change the status of the user account to allow the user to print automatic print jobs in future.■ If a user sends a mailbox job to the machine, a record is automatically added to the accounts database. In order to enable the user to enter the mailbox, you must define a PIN, if the machine access is secured, and change the status to +.
'Automatic'	<ul style="list-style-type: none">■ When a user sends an automatic print job to the machine, a user account record is automatically added to the accounts database. The status of the user account is '+', which means that the user can start unlimited automatic print jobs.■ When a user sends a mailbox job to the machine, a user account record is automatically added to the accounts database. In order to enable the user to enter the mailbox, you must define a PIN, if the machine access is secured.

Check

1. Quit the Key operator system.
2. Check that the status of new user accounts have the correct status.

Defining the job charges of the Network Printer

Introduction

The Océ VarioPrint® 1055/65/75 default charge is one click for each job page side that is copied or printed. You can define the charge for the following output.

- 2-sided output. Select a factor.
- A3/Tabloid 11x17 output. Select a factor.
- Blank page. Select 'Yes' or 'No'.

The default setting is no charge for blank pages of any size. The user must identify the blank pages in the display screen menu.


The charges for scan jobs depend on the number of page sides scanned. You can define a factor for charging. If required, you can ignore the charges of scan jobs. Then, select '0'.

The charges are passed on to the Accounting system and the Copy control device.

Before you begin

Enter the Key operator system ([see ‘Enter or quit the key operator system’ on page 32](#)).

Illustration

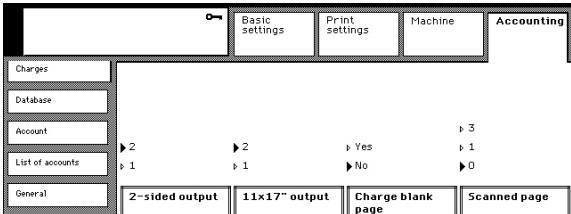

[46] Define the job charges

Defining the job charge for 2-sided output

1. Press the 'Accounting' key.
2. Select the 'Charges' tab.
3. Press the '2-sided output' key to select '1' or '2'.

How to define the job charge for A3/Tabloid 11x17 output

1. Press the 'Accounting' key.
2. Select the 'Charges' tab.
3. Press the '11x17 output' function key to select '1' or '2'.

Defining the job charge for a blank page

1. Press the 'Accounting' key.
2. Select the 'Charges' tab.
3. Press the 'Charge blank page' key to select 'Yes' or 'No'.

Defining the job charge for a scanned page

1. Press the 'Accounting' key.
2. Select the 'Charges' tab.
3. Press the 'Scanned page' key to select '0', '1' or '2'.

Check

1. Quit the Key operator system.
2. To check the selection, make a test job.
Check that the job is charged correctly.

Enable the Copy control device connected to the Network Printer


Introduction

The copy control device is connected externally to the machine. The system gives access to external users who are not authorized in the accounts database. The external user must insert coins or a credit card to gain access to the machine.

Océ Service must install and configure the Copy control device.

You can enable or disable an installed and configured copy control device.

An enabled Copy control device and an access-secured system ([see ‘About the access-secured system of the Network Printer’ on page 50](#)) can be combined, to enable use by internal and external user groups.

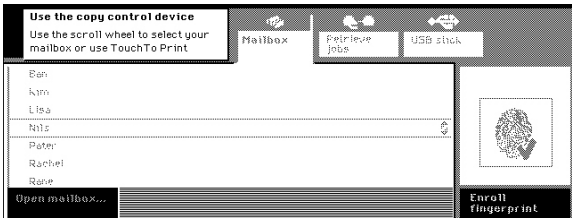

[47] Entry screen for external users


The following table displays the requirements for the external users when the copy control device is enabled:

Job	Requirement	Charges
Copy job	The user must insert coins or a credit card, to access the machine.	Jobs are charged to the 'Copy control device' system account.
Automatic print job	The user can perform an automatic print job if automatic print jobs are permitted.	Jobs are not charged to any account.
Mailbox job	The user must enter coins or a credit card, to access the mailbox.	Jobs are charged on the 'Copy control device' system account.
Scan job	The user must enter coins or a credit card, to access the machine.	Jobs are charged on the 'Copy control device' system account.

Before you begin

Enter the Key operator system ([see 'Enter or quit the key operator system' on page 32](#)).

Illustration

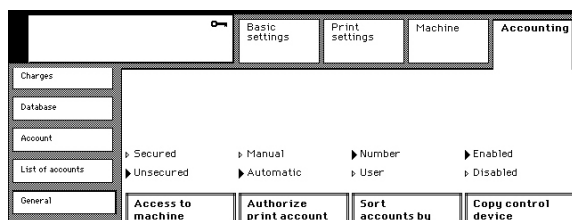

[48] Enable the copy control device

Configuring the copy control device

1. Press the 'Accounting' key.
2. Select the 'General' tab.
3. Press the 'Copy control device' key to select 'Enabled'.

Check

1. Quit the Key operator system.
2. To check the selection, make a test job.
Open the Accounting system, to see if the test job is charged to the Copy control device account.

Access security of the Digital Copier

About the access-secured system of the Digital Copier

Introduction

An access-secured system allows you to perform the following tasks:

- Define the job-page limit for each user.
- Follow the number of job-page clicks the users have done.

To create an access-secured system, proceed as follows:

1. Secure the access to the machine (see *'Secure the access to the Digital Copier machine' on page 62*).

When the access to the machine is secured, all authorized users need a unique PIN to enter the display menu. If the PIN is correct, the user can start jobs.

2. Enter the accounting system. Define the authorization for each user or each user group (see *'About the accounting system' on page 116*).

To accept external users, a copy control device can be a part of the system.

Access-secured system

An access-secured system has the following properties:

Properties
The 'Access to machine' is 'Secured' (Key operator system) (see <i>'Secure the access to the Digital Copier machine' on page 62</i>).
The authorized users have a PIN (Accounting system) (see <i>'Assign or change a PIN' on page 122</i>).
The authorized users have a valid user account (Accounting system) (see <i>'Change the account number' on page 121</i>).

The authorized users can use the machine until the job-page limit of the user account is reached (accounting system).

Security through the copy control device


Security through the copy control device has the following properties:

Properties
Océ Service must install and configure the copy control device.
Access control for the Copy control device is set to 'Enabled' (Key operator system) (see <i>'Enable the Copy control device connected to the Digital Copier' on page 66</i>).
The 'Access to machine' can be secured, so that authorized, internal users can use a PIN instead of using coins or a credit card (see <i>'Secure the access to the Digital Copier machine' on page 62</i>).

Secure the access to the Digital Copier machine

Introduction

The Océ VarioPrint® 1055/65/75 allows you to secure the access to the machine. If the machine is secured, the user must enter a unique PIN, to enter the display screen menu and to start the jobs (see [‘About the access-secured system of the Digital Copier’ on page 60](#)).

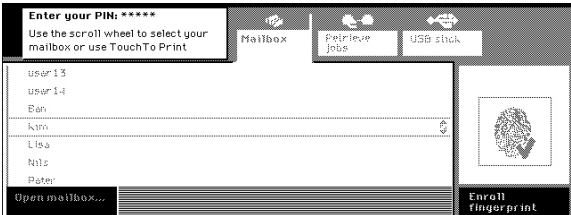


[49] Entry screen, when the access is secured

Before you begin

- 1. Enter the Key operator system (see [‘Enter or quit the key operator system’ on page 32](#)).
- 2. Check that the authorized users have valid user accounts (see [‘A valid user account’ on page 118](#)).

Illustration

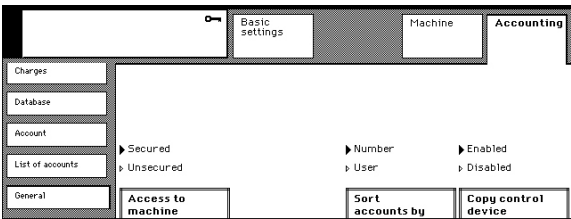

[50] Secure the machine-access

Defining machine security

1. Press the 'Accounting' key.
2. Select the 'General' tab.
3. Press the 'Access to machine' key to select 'Secured' or 'Unsecured'.

Access to machine	Result
Secured	<ul style="list-style-type: none">■ The user must have a PIN, to access the machine.■ The user account must be valid.
Unsecured	<ul style="list-style-type: none">■ Any user can access the machine.

Check

1. Exit the key operator system.
2. Check to insure that the access is controlled according to your needs.

Defining the job charges of the Digital Copier

Introduction

The Océ VarioPrint® 1055/65/75 default charge is one click for each job page side that is copied. You can define the charge for the following output.

- 2-sided (11 x 17") output. Select a factor.
- A3/Tabloid 11x17 output. Select a factor.
- Blank page. Select 'Yes' or 'No'.


The default setting is no charge for blank pages of any size. The user must identify the blank pages in the display screen menu.

The charges are passed on to the Accounting system and the Copy control device.

Before you begin

Enter the Key operator system ([see 'Enter or quit the key operator system' on page 32](#)).

Illustration

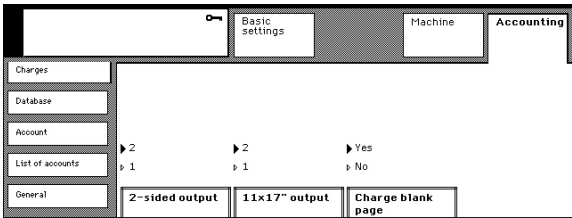

[51] Define the job charges

Defining the job charge for 2-sided output

1. Press the 'Accounting' key.
2. Select the 'Charges' tab.
3. Press the '2-sided output' key to select '1' or '2'.

How to define the job charge for A3/Tabloid 11x17 output

1. Press the 'Accounting' key.
2. Select the 'Charges' tab.
3. Press the '11x17 output' key to select '1' or '2'.

Defining the job charge for a blank page

1. Press the 'Accounting' key.
2. Select the 'Charges' tab.
3. Press the 'Charge blank page' key to select 'Yes' or 'No'.

Check

1. Quit the Key operator system.
2. To check the selection, make a test job.
Check that the job is charged correctly.

Enable the Copy control device connected to the Digital Copier


Introduction

The Copy control device is connected externally to the machine (see [‘About the access-secured system of the Digital Copier’ on page 60](#)). The system gives access to external users who are not authorized in the accounts database. The external user must insert coins or a credit card to gain access to the machine.

Océ Service must install and configure the copy control device.

You can enable or disable an installed and configured copy control device.

An enabled Copy control device and an access-secured system can be combined, to enable use by internal and external user groups.

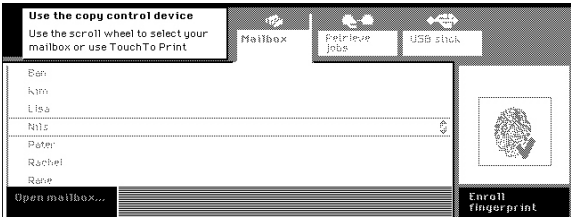

[52] Entry screen for external users


The following table displays the requirements for the external users when the copy control device is enabled:

Job	Requirement	Charges
Copy job	The user must insert coins or a credit card, to access the machine.	Jobs are charged to the 'Copy control device' system account.

Before you begin

Enter the Key operator system (see [‘Enter or quit the key operator system’ on page 32](#)).

Illustration

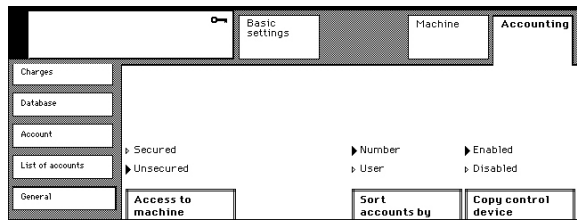

[53] Enable the copy control device

Configuring the copy control device

1. Press the 'Accounting' key.
2. Select the 'General' tab.
3. Press the 'Copy control device' key to select 'Enabled'.

Check

1. Quit the Key operator system.
2. To check the selection, make a test job.
Open the Accounting system, to see if the test job is charged to the Copy control device account.

Chapter 8

Access to the machine components



Control the access to the paper trays


Introduction

You can follow two procedures for controlling the user access to the paper trays.

First, you can lock the paper-compartment to prevent users from entering the paper compartment. The Océ VarioPrint® 1055/65/75 can have a key switch on the paper-compartment door. If the door of the paper-compartment door is open, the users can perform the following tasks:

- Refill the stocks of paper in the trays.
- Place sheets of special material in the paper tray for a particular job.
- Clear the paper jams in the paper-compartment unit.

Secondly, you can instruct the users to call the key operator. The Océ VarioPrint® 1055/65/75 instructs the users to call the key operator if a paper tray is empty or a paper jam occurs. The request is not related to the lock on the door. So, although the door is open, the display can still ask the users to call the key operator.

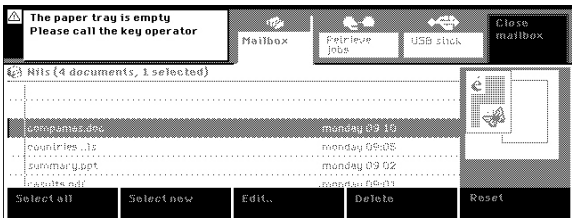


[54] User screen if the paper tray is empty

Before you begin

Enter the Key operator system (see [‘Enter or quit the key operator system’ on page 32](#)).

Illustration

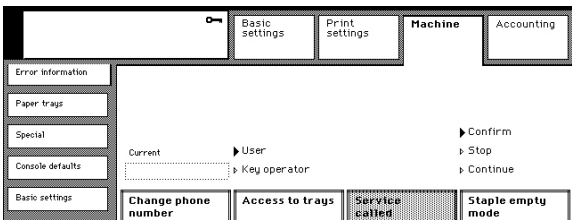

[55] Permit the users to access the Network Printer paper trays

Preventing access to the paper trays

1. Press the 'Machine' key.
2. Select the 'Error information' tab.
3. Press the 'Access to trays' key to select 'Key operator'.

Permitting the user to access the paper trays

1. Press the 'Machine' key.
2. Select the 'Error information' tab.
3. Press the 'Access to trays' key to select 'User'.


Check

1. Exit the key operator system.
2. To check the selection, remove the stock of paper from one of the trays.
Then, start a copy job that uses the empty paper tray.


Control the access to the special feeder

Introduction

The users can use the special feeder to feed the special material that is not available or allowed in the paper trays. If you disable the special feeder, the special feeder function is not selectable on the display screen menu.

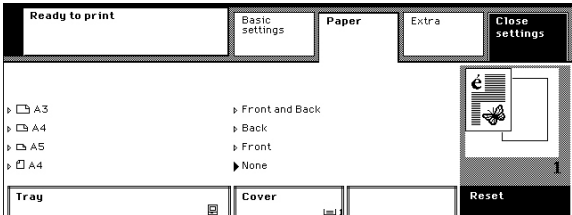

[56] The user cannot select the special feeder

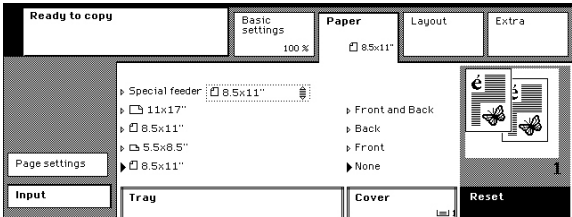


[57] The user can select the special feeder

Before you begin

Enter the Key operator system ([see 'Enter or quit the key operator system' on page 32](#)).

Illustration

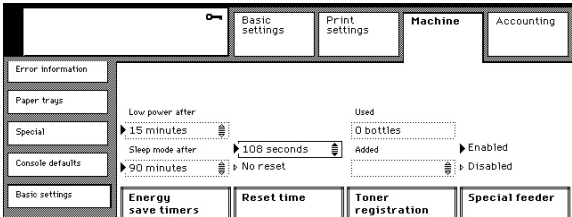

[58] Permit the users to access the special tray

Preventing access to the special tray

1. Press the 'Machine' key.
2. Select the 'Basic settings' tab.
3. Press the 'Special feeder' key to select 'Disabled'.

Permitting the users access to the special tray

1. Press the 'Machine' key.
2. Select the 'Basic settings' tab.
3. Press the 'Special feeder' key to select 'Enabled'.

Check

1. Exit the key operator system.
2. To check the selection, start a test job that requires the special feeder.

Chapter 9

Page and paper settings



Define the paper trays for the report jobs

Introduction

The Océ VarioPrint® 1055/65/75 has maximum 4 paper trays, located in the paper compartment.

The size, orientation and supply of any paper, placed in the trays, is displayed in the user-display screen.

The user can create reports with paper from several paper trays.

In addition to the standard sheets, a report can contain:


- Covers.
- Separation sheets.
- Appendix sheets.

You can allocate the paper trays that contain the material for covers, separation sheets and appendix sheets.

Before you begin

Enter the Key operator system ([see ‘Enter or quit the key operator system’ on page 32](#)).

Illustration

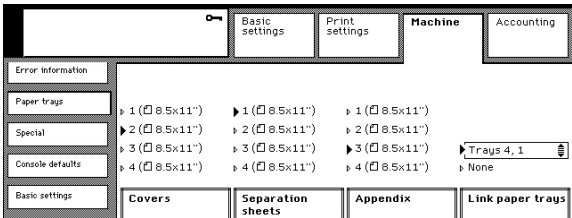

[59] Allocate the paper trays for the report jobs

How to define the paper trays for the report jobs

1. Press the 'Machine' key.
2. Select the 'Paper trays' tab.
3. Press the 'Covers', 'Separation sheets' and 'Appendix' key to select a tray.

Check

1. Exit the key operator system.
2. To check the selection, make a test report job.
Place the necessary materials in the paper trays.
Check to insure that the material is set for your needs.

Define the folio size

Introduction

Paper tray 1, which is adjustable for different paper sizes, can detect the dimensions of the paper with the exception of Folio and Foolscap folio. The difference between the two folio sizes is not be detected. Therefore, you must indicate which type is placed in tray 1. The automatic document feeder can detect the different folio sizes.

The Océ VarioPrint® 1055/65/75 supports the following folio sizes:


- 'Folio' (12.4 x 8.4 inches).
- 'Foolscap folio' (13.2 x 8.12 inches).

'Folio' is the default setting. If the users require jobs on Foolscap folio paper, change the setting for these jobs.

Before you begin

Enter the Key operator system ([see 'Enter or quit the key operator system' on page 32](#)).

Illustration

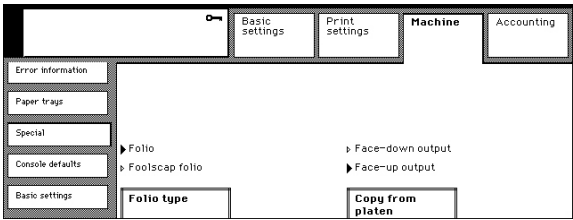

[60] Change the folio size

How to change the folio size

1. Press the 'Machine' key.
2. Select the 'Special' tab.
3. Press the 'Folio type' key to select 'Folio' or 'Foolscap folio'.

Check

1. Exit the key operator system.
2. To check the selection, make a test copy job. Use an original of the selected Folio size.
The original information must fit correctly on the copy page.

Link the paper trays

Introduction

To increase the available paper stock for the jobs, you can link one or more paper trays. When a tray gets empty during a job, paper will be used from the linked paper tray or trays. The paper trays that are linked must contain paper with the same size and orientation.

The following tray linking is possible, depending on the configuration of the machine.


- 'Trays 4, 1'
- 'Trays 4, 2'
- 'Trays 4, 3'
- 'Trays 4, 1, 2'
- 'Trays 4, 1, 3'
- 'Trays 1, 2'
- 'Trays 1, 3'

For example: 'Trays 4, 2' means that the job will first use paper from tray 4. When tray 4 is empty, the job will continue and will use paper from tray 2.

Before you begin


Enter the Key operator system (see [‘Enter or quit the key operator system’](#) on page 32).

Illustration

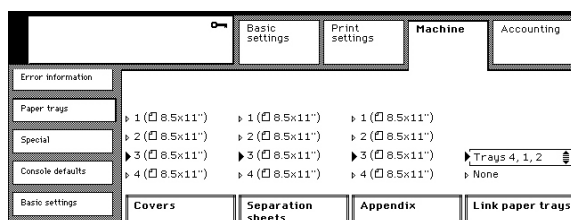

[61] Link the paper trays

Linking the paper trays

1. Press the 'Machine' key.
2. Select the 'Paper trays' tab.
3. Press the 'Link paper trays' key to select the series of values.
Use the scroll wheel  to select the tray or trays.

Canceling the link between paper trays

1. Press the 'Machine' key.
2. Select the 'Paper trays' tab.
3. Press the 'Link paper trays' key to select 'None'.

Check

1. Quit the Key operator system.
2. To check the selection, make a test copy job.
Fill the main paper tray with a few sheets.
Fill the linked paper trays with the same sized paper.
The linked paper trays are used when the paper tray 4 is empty.

Change the default margin shift

Introduction


The margin shift is the distance that the margin is moved to the right or to the left of the page.

The default margin shift is .48 inches. To change the default value, enter a value from + 1 inch (left direction) down to - 1 inch (right direction).

Before you begin


Enter the Key operator system (see [‘Enter or quit the key operator system’](#) on page 32).

Illustration

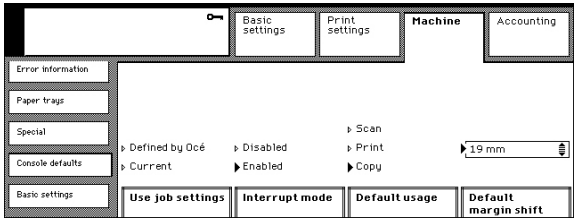

[62] Define the default margin shift

Changing the default margin shift

1. Press the 'Machine' key.
2. Select the 'Console defaults' tab.
3. Use the scroll wheel  to adjust the default margin shift.

Check

1. Exit the key operator system.
2. To check the selection, make a test copy job.
Check that the default margin shift is set for your needs.

Control the output of copy jobs from platen


Introduction

To reduce the production of noise, the Océ VarioPrint® 1055/65/75 default delivers the output of copy jobs from platen with the printed side face-up. If required, you can change the setting to face-down delivery.

Before you begin

Enter the Key operator system (see [‘Enter or quit the key operator system’ on page 32](#)).

Illustration

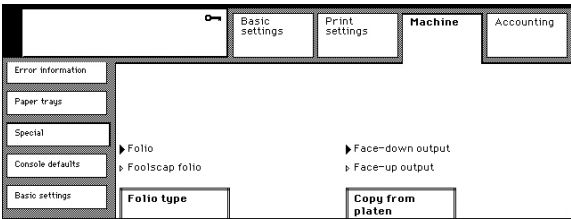


[63] Control the output of copy jobs

How to control the output of copy jobs from platen

1. Press the 'Machine' key.
2. Select the 'Special' tab.
3. Press the 'Copy from platen' key to select 'Output face-down' or 'Output face-up'.

Check

1. Quit the Key operator system.
2. Press the 'Copy' key.
3. Put an original on the platen.
4. Press the Start key .
5. Check the delivery on the finisher bin.

Chapter 10

The interrupt mode



Disable the Interrupt function

Introduction

The Interrupt function allows users to suspend a large job, so that a new job can be started. The suspended job continues, when the new jobs are completed and the user resumes the suspended job.

You can disable the Interrupt function, when the Interrupt function proves to be unacceptable to the users.


Before you begin

Enter the Key operator system (see [‘Enter or quit the key operator system’ on page 32](#)).



Note: When a Copy control device or an external finisher is installed, the Interrupt function does not work.

Illustration

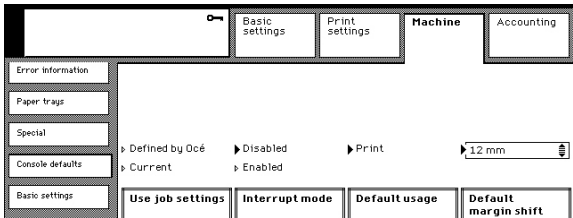

[64] Disable the Interrupt function

How to disable the Interrupt function

1. Press the 'Machine' key.
2. Select the 'Console defaults' tab.
3. Press the 'Interrupt mode' key to select 'Disabled'.

Check

1. Quit the Key operator system.
2. To check the selection, make a test copy job.

Chapter 11

The print and scan mode of the Network Printer



Define the default operating mode of the Network Printer


Introduction

You can define the default operating mode. The selected operating mode must match the most started jobs.

Before you begin

Enter the Key operator system ([see ‘Enter or quit the key operator system’ on page 32](#)).

Illustration

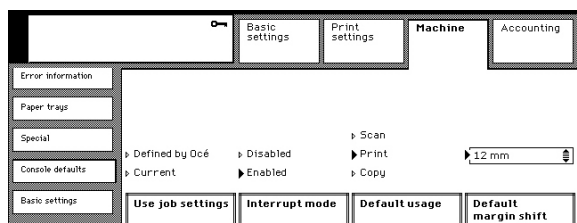

[65] Define the default operating mode

Defining the default operating mode

1. Press the 'Machine' key.
2. Select the 'Console defaults' tab.
3. Press the 'Default usage' key to select the operating mode.

Check

1. Exit the key operator system.
2. Check to insure that the default operating mode is set for your needs.

Define the banner pages

Introduction

The first page of a printed set can be a banner page. A banner page contains information about the print job: such as the user name, the name of the document, the date and the printer name.

You can allocate the paper tray for the banner pages.


To define the banner page configuration, proceed as follows:

Setting	Result
'Never'	A banner page is never printed.
'Selectable'	A banner page is printed if the user has specified the banner page in the printer driver.
'Always'	A banner page is always printed.

Before you begin

Enter the Key operator system ([see ‘Enter or quit the key operator system’ on page 32](#)).

Illustration

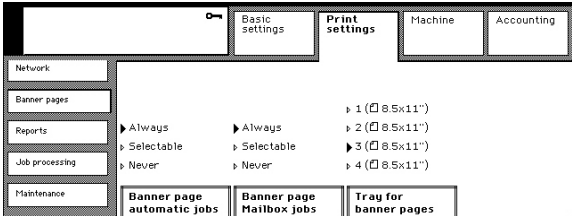

[66] Enter the banner page settings

Defining the banner pages

1. Press the 'Print settings' key.
2. Select the 'Banner pages' tab.
3. Press the 'Banner page automatic jobs' or 'Banner page mailbox jobs' key to enter the selection.

Allocating the paper tray for banner pages

1. Press the 'Print settings' key.
2. Select the 'Banner pages' tab.
3. Press the 'Tray for banner pages' key to select the required paper tray.

Check

1. Exit the key operator system.
2. To check the selection, make a test print job.
Place the necessary material in the paper tray.
Check to insure that the banner page configuration is set for your needs.

Defining the Mailbox Input

About the mailbox

Definition

The mailbox is a personal storage area on the system. The users can print, change and store print jobs from their mailbox.

Smart mailbox

The Smart mailbox adds extra functionality to use the mailbox. The Smart mailbox function can be used when the user can print to more than one printer from the Océ VarioPrint® 1055/65/75 family. The mailbox jobs sent to other printers become local mailbox jobs.

The Smart mailbox configuration must be done with the Océ System Configuration.

Pocket mailbox

The Pocket mailbox enables the users to print documents stored on a USB stick and to scan documents to a USB stick.

The Pocket mailbox configuration must be done with the Océ System Configuration.

Mailbox jobs

A print job becomes a mailbox print job, in the following circumstances:
The user selects 'To mailbox', 'Security' or 'Special feeder' in the Océ printer driver.
The user, who sends a print job, is not authorized to use the printer (see <i>'Secure automatic printing' on page 54</i>).
Someone cancels an automatic print job.
The system moves all new jobs to the mailbox, following a configuration setting (see <i>'Control the automatic print jobs' on page 91</i>).
The system moves the jobs without an Océ job ticket to the mailbox, following a configuration setting (see <i>'Controlling jobs without an Océ job ticket' on page 92</i>).
The system receives jobs from other printers (Smart mailbox members) after the user asks to fetch Smart mailbox jobs.

Mailbox security

To secure the mailbox of a user, you must assign a PIN to the user account record of the user. Then, the user must enter a PIN to open the mailbox (see *'About the access-secured system of the Network Printer' on page 50*).

TouchTo Print

The Océ VarioPrint® 1055/65/75 has a fingerprint sensor to quickly open the mailbox and print the documents.
To use the fingerprint function, the user must first enroll the fingerprint.
The TouchTo Print configuration must be done with the Océ System Configuration.

Control the automatic print jobs

Introduction

The users can instruct the Océ VarioPrint® 1055/65/75 , through the printer driver, that the print job must be stored in the mailbox. When the job is not a mailbox job but an automatic print job, the job is sent to the print queue.

You can prevent automatic printing, so that all print jobs are stored in the mailbox. Check that the users are authorized to open their mailbox.


Before you begin

Enter the Key operator system (see [‘Enter or quit the key operator system’](#) on page 32).



Note: You can stop automatic printing, so that the print jobs remain in the print queue. The user can still initiate the automatic print jobs, but the jobs are not printed.

Illustration

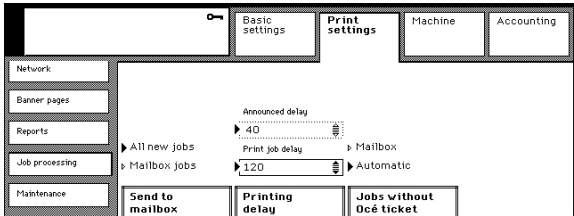

[67] Prevent automatic printing

Controlling the automatic print jobs

1. Press the 'Print settings' key.
2. Select the 'Job processing' tab.
3. Press the 'Send to mailbox' key to select 'All new jobs' or 'Mailbox jobs'.

Check

1. Exit the key operator system.
2. To check the selection, make a test print job.
Check that the print operation on the Océ VarioPrint® 1055/65/75 is according to your purposes.

Controlling jobs without an Océ job ticket

Introduction


If a user does not have a printer driver that is supported by Océ, the special Océ print features are not displayed. The generated print file does not include an Océ job ticket. The Océ VarioPrint® 1055/65/75 allows the user to control the Océ job features through the operator panel. Therefore, the print job must become a mailbox job.

You can instruct the Océ VarioPrint® 1055/65/75 to send all jobs without an Océ job ticket to the mailbox.

Before you begin

Enter the Key operator system (see *'Enter or quit the key operator system'* on page 32).

Illustration

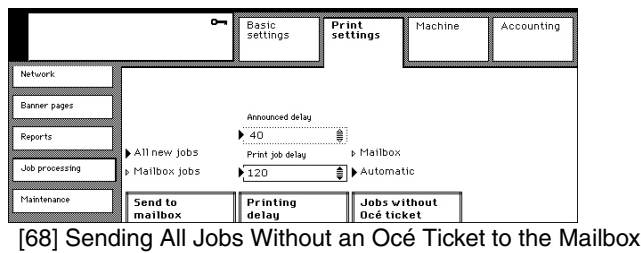

Controlling jobs without an Océ ticket

1. Press the 'Print settings' key.
2. Select the 'Job processing' tab.
3. Press the 'Jobs without Océ ticket' key to select 'Mailbox' or 'Automatic'.

Check

1. Quit the key operator system.
2. To check the selection: start a print job with a generic printer driver.


Controlling the Time Delay for Print Jobs

About the printing delay

Definition

The printing delay is the minimum interval between the printing of two automatic print jobs that originate from the print queue.

Illustration

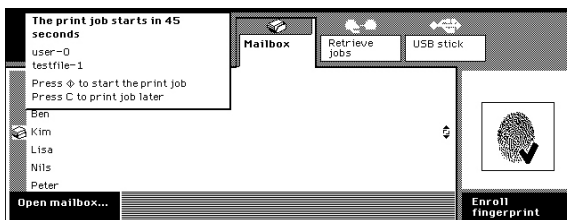

[69] User Screen An automatic print job is announced

The timers

The period of the printing interval is derived from the following two timers:

- **Print job delay timer.**
The print job delay timer starts when an automatic print job is complete. During the delay, the users can use the Océ VarioPrint® 1055/65/75 for other work.
- **Announced delay timer.**
The announced delay timer starts before the end of the print job delay. During the announced delay time, a message informs the user that a new automatic print job will be printed within 'xx' seconds.



Note: *The user can start any job if an automatic print job is announced.*

Define the printing delay for the automatic print jobs

Introduction

The printing delay is determined by the following two items.

- Print job delay (10 - 300 seconds).
- Announced delay (10 - 100 seconds).

You can change the default values of the print job delay (120 seconds) and announced delay (20 seconds).


If the machine is mainly used for copy, scan or mailbox jobs, you can increase the print job delay. The longer interval, between two automatic print jobs, allows the users to start the jobs on an idle machine.

If the machine is mainly used for automatic printing, you can shorten the print job delay. The shorter interval between two automatic jobs prevents an accumulation of automatic print jobs in the print queue.

Before you begin


Enter the Key operator system ([see ‘Enter or quit the key operator system’ on page 32](#)).

Illustration

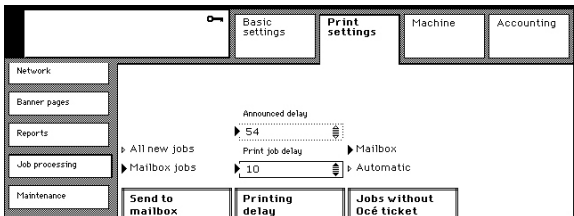


[70] Define the printing delay timers

Changing the print job delay

1. Press the 'Print settings' key.
2. Select the 'Job processing' tab.
3. Press the 'Printing delay' key to select 'Print job delay'.
Use the scroll wheel  to define the print job delay.

Changing the announced delay

1. Press the 'Print settings' key.
2. Select the 'Job processing' tab.
3. Press the 'Printing delay' key to select 'Announced delay'.
Use the scroll wheel  to define the announced delay.

Check

1. Exit the key operator system.
2. To check the selection, send a series of automatic print jobs to the machine.
Check that the timers work according to your purposes.

Chapter 12

The system information



Reading Job-page Counters

Introduction

The Océ VarioPrint® 1055/65/75 records the number of job-page clicks and page charges.


The Océ VarioPrint® 1055/65/75 provides the following procedures for retrieving the job counters:

- The key operator system records the number of job-page clicks for each operating mode as stored since the last installation.
- A total counter, behind the front main door of the machine, displays the total number of job-page clicks that the machine has made.
Océ Service configures the charges for scan jobs. The Configuration report records the configured charge for scan job pages.
- The Accounting system records the job pages made by each user.

Before you begin

Enter the Key operator system ([see ‘Enter or quit the key operator system’ on page 32](#)).

Illustration

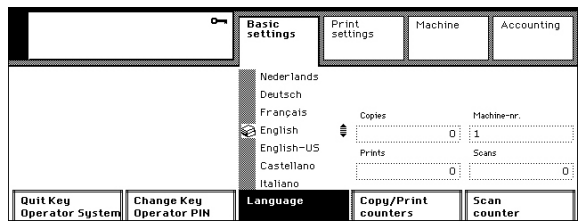


[71] Reading the job page counters of the Océ VarioPrint® 1055/65/75 Network Printer


How to read the job page counters in the Key operator system

1. Press the 'Basic settings' key.
2. The 'Copy/Print counters' and 'Scan counter' function box show the number of completed pages, handled during copy, print and scan jobs.

Illustration

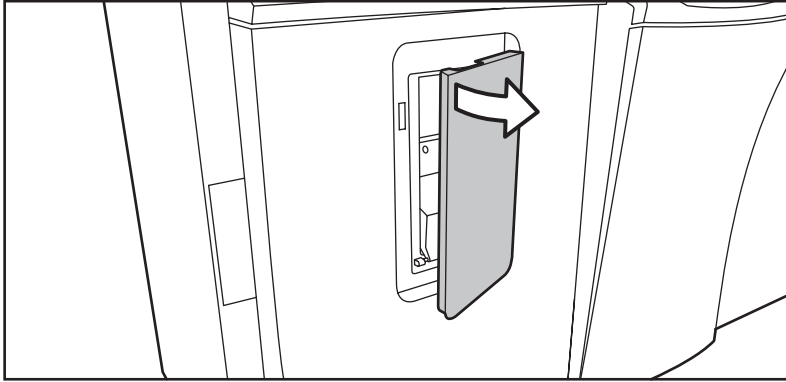

[72] Open the front door

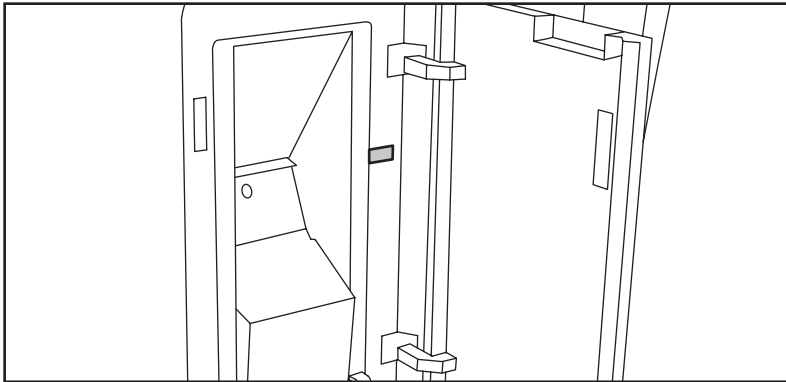

[73] Read the total counter

Reading the total counter

1. Open the front door.
2. Read the total counter.

Check the machine memory

Introduction

The default size of the machine memory is 128 Mb, but this can be extended.

You can check the machine memory, in the Configuration report. If the scan module is not installed, check the machine memory in the key operator system.

Before you begin

Enter the Key operator system ([see ‘Enter or quit the key operator system’ on page 32](#)).

Checking the machine memory in the key operator system

1. Press the 'Basic settings' key.
2. The 'Memory' function box shows the machine memory.

Check the machine number


Introduction

When you call Océ Service, you may be asked to give the machine number of your Océ VarioPrint® 1055/65/75 .

Before you begin

Enter the Key operator system (see [‘Enter or quit the key operator system’](#) on page 32).

Illustration

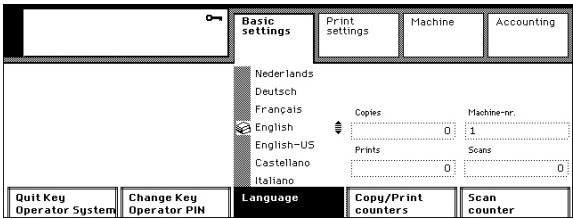

[74] Check the machine number

Checking the machine number

1. Press the 'Basic settings' key.
2. The 'Scan counter' box shows the machine number.



Note: If the scan module is not installed, the function 'Memory' is displayed.

Print the system information of the Network Printer

Printing system reports


Introduction

The system reports list the configuration or system logs.
You can print these reports. The Configuration report provides you an overview of the current settings.

Before you begin


Enter the Key operator system ([see ‘Enter or quit the key operator system’ on page 32](#)).

Illustration

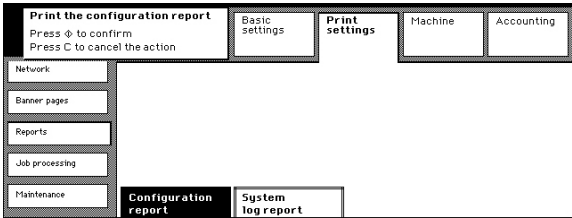

[75] Printing the configuration report

How to print the system reports

1. Press the 'Print settings' key.
2. Select the 'Reports' tab.
3. Press the 'Configuration report' or the 'System log report' key.
4. Press the start key  to confirm.

Check

1. Exit the key operator system.
2. The selected report will be printed after you have left the key operator system.

Print the accounts-database file


Introduction

You can print the accounts-database file, that contains the information about the accounts on the system (see *'About the accounting system'* on page 116).

Before you begin


Enter the Key operator system (see *'Enter or quit the key operator system'* on page 32).

Illustration

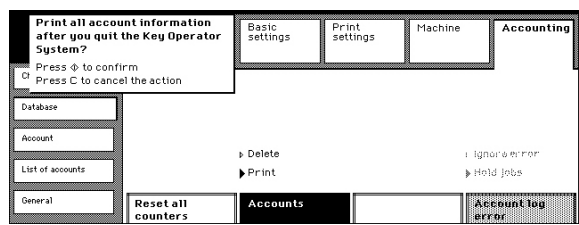

[76] Print the accounts-database file

Printing the accounts-database file

1. Press the 'Accounting' key.
2. Select the 'Database' tab.
3. Press the 'Accounts' key to select 'Print'.
4. Press the start key  to confirm.

Check

1. Exit the key operator system.
2. The report will be printed after you have left the key operator system.

Chapter 13

Energy save timers



The Energy save timers of the Network Printer

About the energy save modes of the Network Printer

Definition

To meet the EPA Energy Star® guidelines, the Network Printer includes two energy save modes: the low power mode and the sleep mode. These modes, among others, enable an efficient and economical consumption of energy.

Océ Service can reconfigure the energy save modes when the default settings prove to be unacceptable to the users.

Leave the energy save mode

The Network Printer switches to low power mode after the expiration of the time of the lower power timer.

The Network Printer switches to the sleep mode after the expiration of the time of the sleep mode timer.

The Network Printer leaves the energy save mode in the following circumstances.

- The start of an automatic print job.
- The user presses a key.
- The user places the originals in the automatic document feeder.

Set the energy save timers of the Network Printer

Introduction

You can set the following energy save timers (see *'About the energy save modes of the Network Printer'* on page 106).

- The low power timer (range 1 to 15 minutes).
- The sleep mode timer (range 1 to 90 minutes).

You can change the default values of the low power timer (15 minutes) and the sleep mode timer (90 minutes).

If the default values result in problems, due to the usage pattern, you can request the Océ Service to increase the limits of both timers to a maximum of 240 minutes.


The machine requires 8 seconds to switch back from the low power mode.

The machine requires 7 minutes to switch back from the sleep mode.

Before you begin


Enter the Key operator system (see *'Enter or quit the key operator system'* on page 32).

Illustration

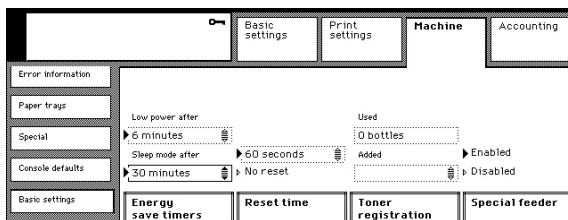


[77] Set the energy save timers

Setting the low power timer

1. Press the 'Machine' key.
2. Select the 'Basic settings' tab.
3. Press the 'Energy save timers' key to select 'Low power after'.
Use the scroll wheel  to select a value.

Setting the sleep mode timer

1. Press the 'Machine' key.
2. Select the 'Basic settings' tab.
3. Press the 'Energy save timers' key to select 'Sleep mode after'.
Use the scroll wheel  to select a value.

Check

1. Exit the key operator system.
2. Check to see if the timers work according to your needs.

Disable the sleep mode timer of the Network Printer

Introduction


You can disable the sleep mode timer if the maximum settings prove to be unacceptable to the users.

Océ Service must reconfigure the system so that you can disable the sleep mode.

Before you begin

Enter the Key operator system (see [‘Enter or quit the key operator system’](#) on page 32).

Illustration

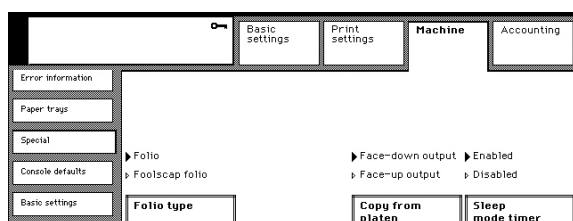

[78] The enabled sleep mode timer

How to disable the sleep mode

1. Press the 'Machine' key.
2. Select the 'Special' tab.
3. Press the 'Sleep mode timer' key to select 'Disabled'.

Check

1. Exit the Key Operator system.
2. Check to see if the timer is disabled.
The sleep mode will not be switched after the expiration of the sleep mode time.

The Energy save timers of the Digital Copier

About the energy save modes of the Digital Copier

Definition

To meet the EPA Energy Star® guidelines, the Digital Copier includes two energy save modes: the low power mode and the automatic switch off. These modes, among others, enable an efficient and economical consumption of energy.

Océ Service can reconfigure the energy save modes if the default settings prove to be unacceptable to the users.

Low power mode

The Digital Copier switches to the low power mode after the expiration of the time of the low power timer.

The Digital Copier leaves the low power mode in the following circumstances.

- The user presses a key.
- The user places the originals in the automatic document feeder.

Automatic switch off

The Digital Copier has an automatic switch off function. The machine switches off automatically after the pre-set switch off time.

To activate the machine, press the ON / OFF button on the machine.

Set the energy save timers of the Digital Copier

Introduction

You can set the following energy save timers (see *'About the energy save modes of the Digital Copier'* on page 110).

- The low power timer (range 1 to 15 minutes).
- The automatic switch off (range 1 to 90 minutes).

You can change the default values of the low power timer (15 minutes) and the automatic switch off (90 minutes).


If the default values result in problems, due to the usage pattern, you can request the Océ Service to increase the limits of both timers to a maximum of 240 minutes.

The machine requires 8 seconds to switch back from the low power mode.
The machine requires 8 minutes to switch back from the automatic switch off.

Before you begin


Enter the Key operator system (see *'Enter or quit the key operator system'* on page 32).

Illustration

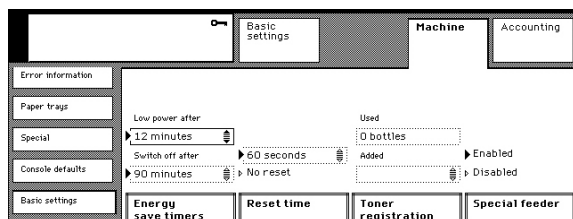


[79] Set the energy same timers on the Digital Copier

Setting the low power timer

1. Press the 'Machine' key.
2. Select the 'Basic settings' tab.
3. Press the 'Energy save timers' key to select 'Low power after'.
Use the scroll wheel  to select a value.

Setting the switch off time

1. Press the 'Machine' key.
2. Select the 'Basic settings' tab.
3. Press the 'Automatic switch-off' key.
Use the scroll wheel  to select a value.

Check

1. Exit the key operator system.
2. Check to see if the timers work according to your needs.

Disabling the automatic switch off

Introduction


You can disable the automatic switch off if the maximum settings prove to be unacceptable to the users (see *'About the energy save modes of the Digital Copier'* on page 110).

Océ Service must reconfigure the system so that you can disable the automatic switch off.

Before you begin

Enter the Key operator system (see *'Enter or quit the key operator system'* on page 32).

Illustration

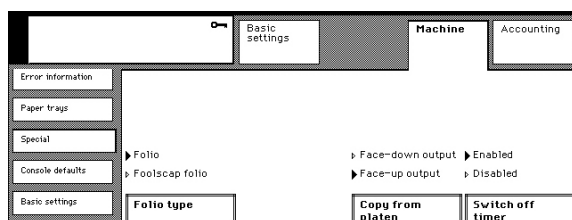

[80] Automatic switch off is enabled

Disabling the automatic switch off

1. Press the 'Machine' key.
2. Select the 'Special' tab.
3. Press the 'Switch off timer' key to select 'Disabled'.

Check

1. Quit the Key operator system.
2. Check to see if the timer is disabled.

The machine will not be switched off after the expiration of the automatic switch off time.

Chapter 14

The Accounting system



About the accounting system

Introduction

The Accounting system supports the access-secured system. If you have activated the access-security, you must also apply the Accounting system, to define the authorization for each user or each group of users.

The Accounting system stores the information about the user accounts.

The Accounting system has the following features.

- Maintains up to 2000 user accounts.
- Defines the authorization of each user.
- Records the number of job pages that each user has made.

The Océ VarioPrint® 1055/65/75 allows you to maintain the accounts database in the key operator system.

Accounts database

The accounts database contains the user accounts and system accounts. The following information is stored in the records of the user accounts:

Information	Description
User	Network user name
Account number	Number to identify a user account or a group account
PIN	Password to access the machine and the mailbox
Status	Status of the user account The status can be open (valid) or closed (invalid): the status defines the access to the machine
Limit	Maximum allowed job pages (clicks)
Copies	Number of completed copy job pages (clicks)
Prints	Number of completed print job pages (clicks)
Scans	Number of completed scan job pages (clicks)

Accounts-database records

You can add, change or delete the records to maintain the accounting system. You can define the authorization and the job-page limit for each user or each group of users.

About the system accounts

Introduction

The accounts database contains the following system accounts:

- Key operator account.
- Copy control device account.
- Copier user account.

You cannot delete the system accounts.

System accounts

System account	Account number	Description
Key operator	99997	The job pages, generated by the system, such as the system reports and the error pages, are charged to the Key operator account. You can make any jobs on the Key operator account, when you use the Key operator PIN. You can change the default PIN of the Key Operator .
Copy control device	99998	The job pages are charged to this system account, when the Copy control device is enabled.
Copier user account	99999	The job pages are charged to the user account, only when the access-security is disabled.


Create the user accounts

A valid user account

Introduction

If you have secured the access to the machine, you must have valid user accounts to allow the users to enter the display screen menu (see *‘About the access-secured system of the Network Printer’* on page 50)(see *‘About the access-secured system of the Digital Copier’* on page 60).

Illustration

				Basic settings		Print settings		Machine		Accounting	
Charges											
Database											
Account											
List of accounts											
General											

[81] A valid user account

A valid user account

A user account is valid under the following circumstances.

- The account number has been assigned (see *‘Change the account number’* on page 121); and
- A PIN has been assigned (see *‘Assign or change a PIN’* on page 122); and
- The status of the user account is open (+) (see *‘Changing the Status’* on page 123); and
- The job-page limit for the user account has been assigned (see *‘Defining the Job-page Limit’* on page 124).

Creating a new user account record on the Network Printer

Introduction

The Key operator systems provides two methods, to create a new record in the accounts database.

1. Create new user account records using the key operator system. See the instructions below for creating this user account.
2. A user prints to the machine for the first time. A record with the network username of the user is automatically added to the accounts database if the mailbox of the user is opened.

The operator panel on the Océ VarioPrint® 1055/65/75 does not provide the alphanumeric keys to add the network username to the records. Therefore, to create a user account to permit at least the print mode, both steps must be done.

Before you begin

Enter the Key operator system ([see 'Enter or quit the key operator system' on page 32](#)).

Illustration

	Key							
	Basic settings		Print settings		Machine		Accounting	
Charges	Number	User	Status	PN	Limit	Copies	Prints	Scans
Database	-	Nils	+		0	-	0	0
Account	34443	Rachel	+	56785	-	0	0	0
List of accounts	99996	Pocket Mailbox	+	0	-	0	0	5
	99997	Key Operator	+	0	-	0	0	0
General	99998	Copy Charge Device	+	0	-	0	0	0
	Create account	Go to account	Change account number		Change PIN			

[82] The new user account added to the list

How to create a user account through the Key operator system

1. Press the 'Accounting' key.
2. Select the 'List of accounts' tab.
3. Press the 'Create account' key.
4. Use the numeric keys to enter a unique 5-digit account number.

Create a user account with a network user name

1. Ask the user to print to the Océ VarioPrint® 1055/65/75 .
2. If the user has printed to the mailbox, open it.
If the job was automatically printed, the record is directly added.
3. Select the record and edit the record, if required.

Creating a new user account record on the Digital Copier

Introduction

You can create new user-account records through the Key operator system. See the instructions below for creating this user account.

Before you begin

Enter the Key operator system ([see ‘Enter or quit the key operator system’ on page 32](#)).

Illustration

		Basic settings		Machine		Accounting		
Charges	Number	User	Status	PIN	Limit	Copies	Prints	Scans
Database								
Account	11111	*11111	+	55319	-	0	0	0
	99996	Pocket Mailbox	+	0	-	0	0	0
List of accounts	99997	Key Operator	+	20750	-	0	0	0
	99998	Copy Charge Device	+	0	-	0	0	0
General	Create account	Go to account		Change account number		Change PIN		

[83] The new user account added to the list

How to create a user account through the Key operator system

1. Press the 'Accounting' key.
2. Select the 'List of accounts' tab.
3. Press the 'Create account' key.
4. Use the numeric keys to enter a unique 5-digit account number.

Maintaining the Accounts Database

Change the account number

Introduction

The user account must have a unique user account number. You can use sequential numbers or numbers assembled from the department or the group identifiers.

If required, you can change the account number.

Before you begin


Enter the Key operator system ([see ‘Enter or quit the key operator system’ on page 32](#)).

Illustration

Status	PIN	Limit	Copies	Prints	Scans			
----	Nbr	+	54444	-	0	0	0	0
99996	Pocket Mailbox	+	0	-	0	0	0	0
99997	Key Operator	+	0	-	0	0	0	0
99998	Copy Charge Device	+	0	-	0	0	0	0

[84] Change the account number

Changing an account number

1. Press the 'Accounting' key.
2. Select the 'List of accounts' tab.
3. Use the scroll wheel to select the record of the user account.
4. Press the 'Change account number' key.
5. Use the numeric keys to enter a unique 5-digit account number in the 'Number' box.
6. Press the start key  to confirm.

Assign or change a PIN

Introduction

To have a valid user account, the user account must have a PIN.

Before you begin

Enter the Key operator system (see ‘Enter or quit the key operator system’ on page 32).



Note: If required, you can change the PIN of the Key operator when you press 'Basic settings' key.



Note: When the PIN is 00000, the PIN is not valid.

Illustration

Enter new PIN of 5 digits Press Φ to confirm Press C to cancel the action		Basic settings		Print settings		Machine		Accounting	
Charges	Number	User	Status	PIN	Limit	Copies	Prints	Scans	
Database	15444	Nils	+	----	-	0	0	0	0
Account	99996	Pocket Mailbox	+	0	-	0	0	0	0
List of accounts	99997	Key Operator	+	0	-	0	0	0	0
General	99998	Copy Charge Device	+	0	-	0	0	0	0
Create account		Go to account		Change account number		Change PIN			

[85] Change the PIN

Assigning or changing a PIN

1. Press the 'Accounting' key.
2. Select the 'List of accounts' tab.
3. Use the scroll wheel to select the record of the user account.
4. Press the 'Change PIN' key.
5. Use the numeric keys to enter a unique 5-digit PIN.
6. Press the start key to confirm.

Changing the Status

Introduction

You can change the status of the user account, to enable or disable the access to the machine when the access is secured.

If the status is closed (-), the user account is invalid.

If the status is open (+), the user account is valid.

Before you begin


Enter the Key operator system (see [‘Enter or quit the key operator system’](#) on page 32).

Illustration

	Basic settings		Print settings		Machine		Accounting	
Charges	Number	User	Status	PN	Limit	Copies	Prints	Scans
Database								
Account	13444	Nils	-	34444	-	0	0	0
List of accounts	99996	Pocket Mailbox	+	0	-	0	0	0
	99997	Key Operator	+	0	-	0	0	0
General	99998	Copy Charge Device	+	0	-	0	0	0
	Change status		Change limit		Reset counters		Delete account	

[86] Changing the Status

Changing the status of a user account

1. Press the 'Accounting' key.
2. Select the 'Account' tab.
3. Use the scroll wheel  to select the record of the user account.
4. Press the 'Change status' key to change the status.

Defining the Job-page Limit

Introduction

If the limit of a user account is 0, the user can create an unlimited number of job pages. To restrict the number of job pages, you can set a limit.

If the limit has been reached, you can reset the counters.

Before you begin

Enter the Key operator system ([see ‘Enter or quit the key operator system’ on page 32](#)).

Illustration

Enter new limit of 7 digits
maximum
0 = no limit

Press Φ to confirm
Press C to cancel the action

Basic settings

Print settings

Machine

Accounting

	Status	PN	Limit	Copies	Prints	Scans			
Database									
Account	15444	Nils	+	34444	-----	0	0	0	0
List of accounts	99996	Pocket Mailbox	+	0	-	0	0	0	0
	99997	Key Operator	+	0	-	0	0	0	0
	99998	Copy Charge Device	+	0	-	0	0	0	0

General

Change status



Change limit

Reset counters

Delete account

[87] Enter a job-page limit

Defining the job-page limit for a user account

- 1. Press the 'Accounting' key.
- 2. Select the 'Account' tab.
- 3. Use the scroll wheel  to select the record of the user account.
- 4. Press the 'Change limit' key.
- 5. Use the numeric keys to enter the limit.
- 6. Press the start key  to confirm.

The user accounts in the accounts database are displayed in account-number sequence.

Before you begin

Illustration

[88] The sequence of the user accounts based on number

[89] Change the sequence of the user accounts

1. Press the 'Accounting' key.
2. Select the 'General' tab.
3. Press the 'Sort accounts by' key to select 'User' or 'Number'.

Reset the job-page counters

Introduction

You can reset the job-page counters to allow the users to start jobs when the limit has been reached.

If necessary, you can simultaneously reset the job page counters of all users.

Before you begin

Enter the Key operator system ([see ‘Enter or quit the key operator system’ on page 32](#)).



Attention: You cannot reverse the reset action.

Illustration

Reset the counters of this account to 0?
Press Φ to confirm
Press C to cancel

Basic settings

Print settings

Machine

Accounting

		Status	PN	Limit	Copies	Prints	Scans
Database	15444 Nils	+	34444	-	0	0	0
	99996 Pocket Mailbox	+	0	-	0	0	0
Account	99997 Key Operator	+	0	-	0	0	0
	99998 Copy Charge Device	+	0	-	0	0	0
List of accounts	99999 Copier User	+	0	-	0	0	0

General

Change status

Change limit

Reset counters

Delete account

[90] Reset the job-page counters of a user account

Reset the counters of all accounts to 0?
Attention: you cannot undo this action
Press Φ to reset the counters to 0
Press C to cancel

Basic settings

Print settings

Machine

Accounting

Database

Account

List of accounts

General

Reset all counters

Accounts

Account log error

Delete



Print

Ignore error


Hold jobs

[91] Reset the job-page counters of all user accounts

Resetting the job-page counters of a user account

1. Press the 'Accounting' key.
2. Select the 'Account' tab.
3. Use the scroll wheel  to select the record of the user account.
4. Press the 'Reset counters' key.
5. Press the start key  to confirm.

Resetting the job-page counters of all user accounts

1. Press the 'Accounting' key.
2. Select the 'Database' tab.
3. Press the 'Reset all counters' key.
4. Press the start key  to confirm.

Delete the user accounts

Introduction

If a user account is no longer required, delete the record from the accounts database.

If necessary, simultaneously delete all user accounts.

The deleted account numbers are available for new user accounts.

Before you begin

Enter the Key operator system ([see ‘Enter or quit the key operator system’ on page 32](#)).



Attention: You cannot undo the delete action.



Note: *You cannot delete the system accounts.*

Illustration

Delete this account?
Press Φ to confirm
Press C to cancel

Basic settingsPrint settingsMachineAccounting

ChargesDatabaseAccountList of accountsGeneral

Number	User	Status	PN	Limit	Copies	Prints	Scans
-	Peter	+	0	-	0	0	0
-	Rachel	+	0	-	0	0	0
13444	Nils	+	34444	-	0	0	0
99996	Pocket Mailbox	+	0	-	0	0	0
99997	Key Operator	+	0	-	0	0	0
99998	Copy Charge Device	+	0	-	0	0	0

Change statusChange limitReset countersDelete account

[92] Delete a user account

Delete all accounts? Attention:
you cannot undo this action
Press Φ to delete all accounts
Press C to cancel

Basic settingsPrint settingsMachineAccounting

DatabaseAccountList of accountsGeneral

Reset all countersAccountsAccount log error



► Delete► Print

Ignore errorHold jobs


[93] Delete all user accounts

128 Chapter 14 The Accounting system

Deleting a user account

1. Press the 'Accounting' key.
2. Select the 'Account' tab.
3. Use the scroll wheel  to select the record of the user account.
4. Press the 'Delete account' key.
5. Press the start key  to confirm the action.

Deleting all user accounts

1. Press the 'Accounting' key.
2. Select the 'Database' tab.
3. Press the 'Accounts' key to select 'Delete'.
4. Press the start key  to confirm the action.


Chapter 15


Maintain the machine



Add the toner

Introduction

The Océ VarioPrint® 1055/65/75 reports if the toner level is low .

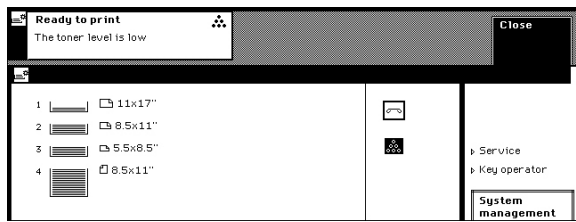

[94] The toner level is low

Make sure that you correctly follow the instructions.

When the toner reservoir has been filled, indicate that you have added a new bottle of toner in the key operator system.



Attention: Do not add the toner unless the machine requests this.



Attention: Only use F4 toner.



Attention: Do not use more than one bottle of toner at a time.




Attention: Keep the Océ VarioPrint® 1055/65/75 switched on while you add the toner.



Attention: If you spill any toner, read the Safety manual how to remove the toner.

Preparing the new bottle of toner

1. Tap 5 times on the bottle and rotate the bottle 20 times.

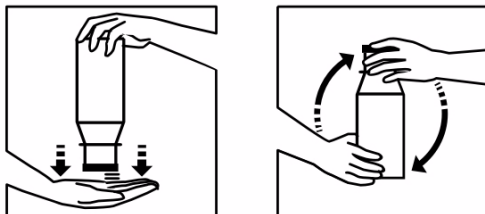


[95] Prepare the new bottle of toner


2. Remove the lid from the bottle.
Do not break the seal.

Filling the toner reservoir


1. Open the front door.

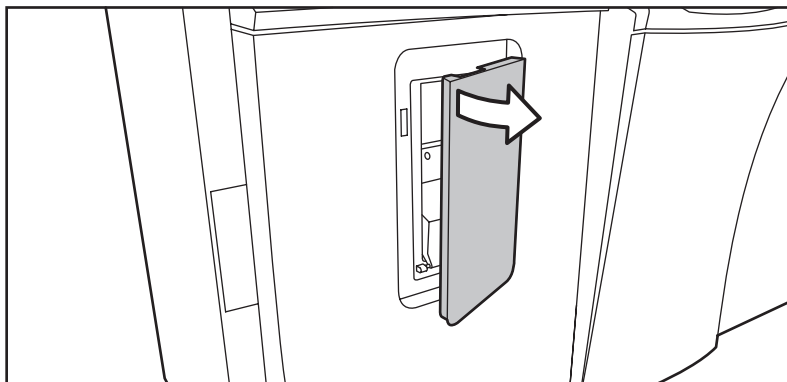

2. Use a coin or screwdriver to open the cover of the toner reservoir.

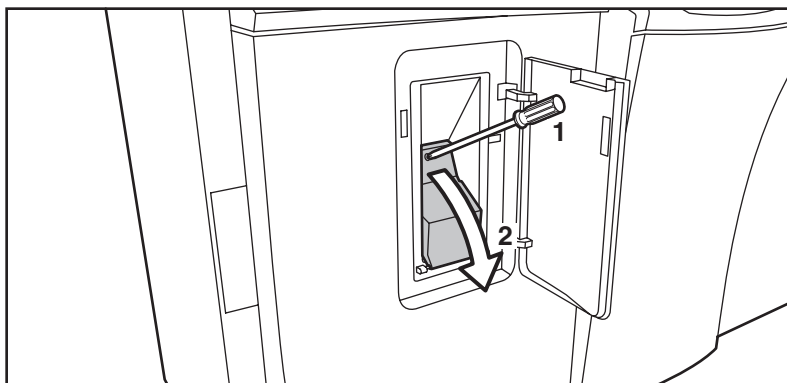

3. Open the black lid of the reservoir.
4. Insert the toner bottle in the toner reservoir.

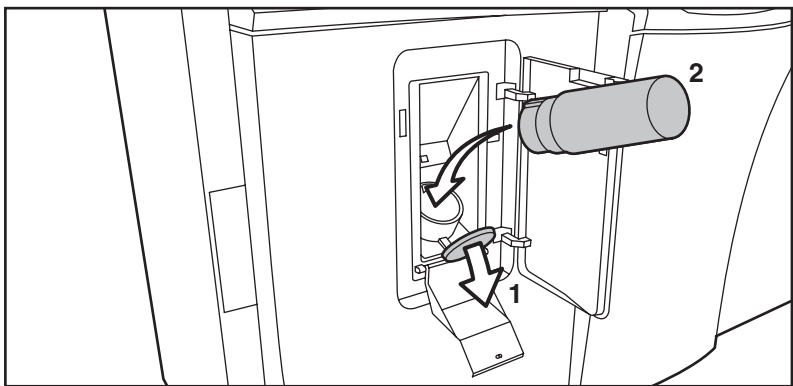


- 5. Remove the bottle when the bottle is empty.
- 6. Place the lid on the empty bottle.

Close the toner reservoir


- 1. Close the cover of the toner reservoir.
- 2. Close the front door.

Registering the added toner

- 1. Enter the Key Operator System.
 - 2. Press the 'Machine' key.
 - 3. Select the 'Basic settings' tab.
 - 4. Press the 'Toner registration' key.
- Use the scroll wheel to indicate that you have added 1 bottle of toner.

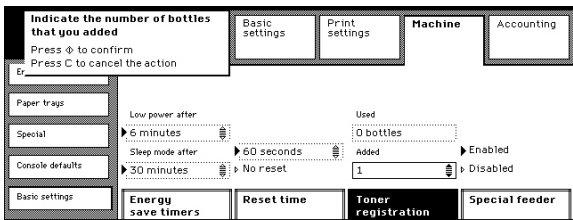

[99] Indicate that you added one bottle

- 5. Press the start key  to confirm.


Check

- 1. Exit the key operator system.
- 2. Check to see that the low-toner symbol is no longer displayed.

Add the staples


Introduction

The Océ VarioPrint® 1055/65/75 has one stapler for internal or offline stapling.

The Océ VarioPrint® 1055/65/75 reports when the stapler is empty .

The new staples are available in a cartridge.


Use S2 staples for the stapler.

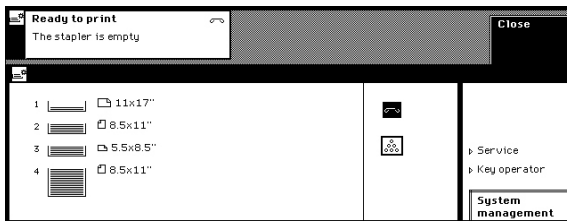


[100] The stapler is empty

Accessing the stapler


1. Open the paper-compartment door.

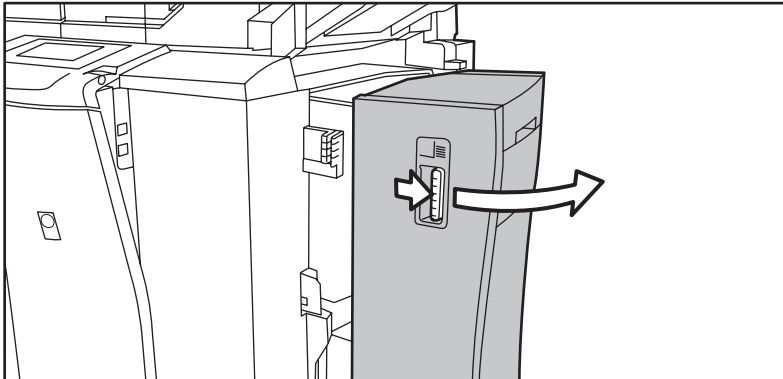

2. Slide the frame of the paper-compartment door to the right.

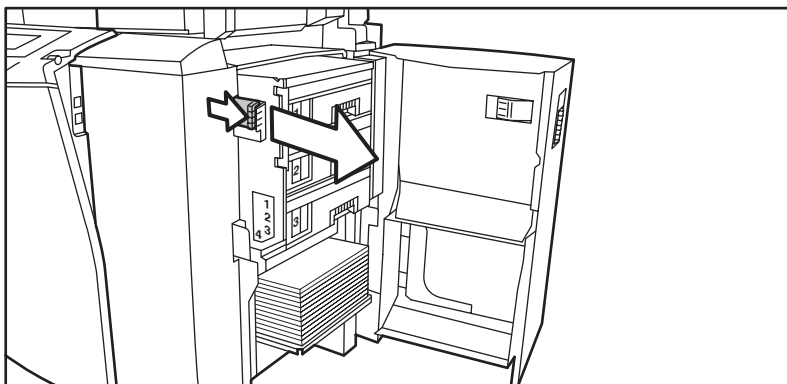


3. Raise the top cover of the finisher.

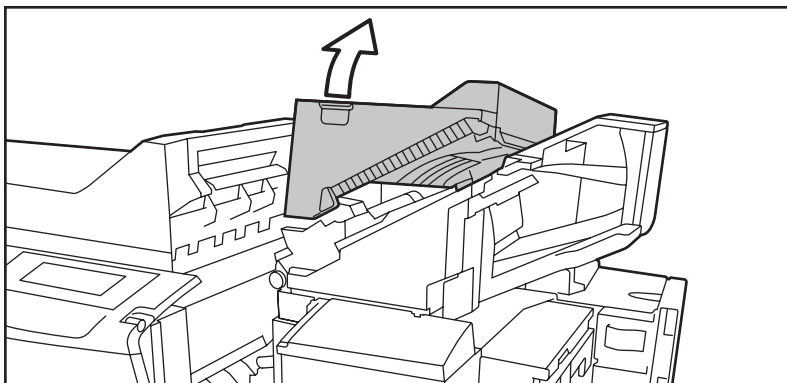


Accessing the staple cartridge

1. Loosen the screw of the latch on the stapler unit.
2. Move the latch backwards.

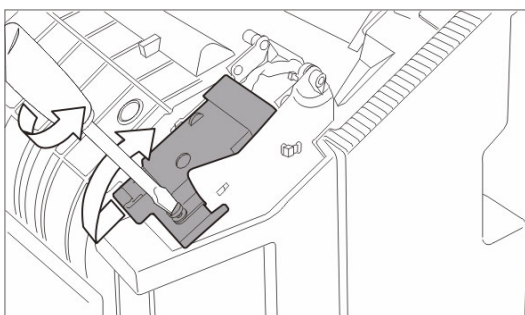

3. Pull the lever backwards and lift out the stapler unit.
The stapler unit turns over.
4. Remove the empty staple cartridge.

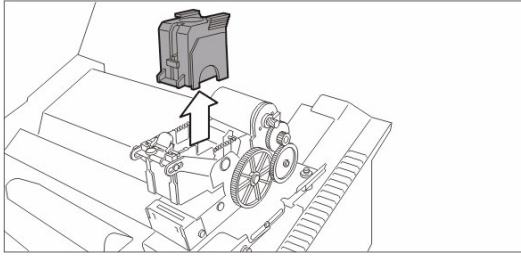

Adding the new staple cartridge

1. Remove any individual staples that have remained in the staple path and on the anvil.
2. Slide a new staple cartridge in the stapler unit until the cartridge clicks into place.

Closing the stapler unit

1. Turn over the stapler unit.
2. Pull the lever of the stapler unit backwards and push down the stapler as far as it goes. Release the lever.
3. Move the latch forwards and tighten the screw.

Closing the covers and doors

1. Lower the top cover.
2. Slide the frame to the left until the frame locks in position.
3. Close the paper-compartment door.

Check


Staple a set manually until the first staple is inserted to test the new staple cartridge.

Empty the staple receptacle

Introduction

The Océ VarioPrint® 1055/65/75 has a staple removal unit on the top left cover. The removed staples are stored in a receptacle. You must empty a full staple receptacle.

Illustration

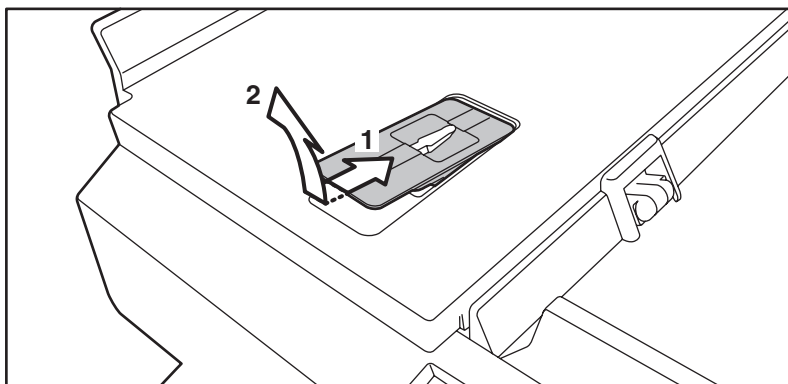

[106] Empty the staple receptacle

Emptying the staple receptacle

1. Remove the receptacle from the holder. Take care that the staples do not fall into the machine.
2. Empty the receptacle and replace the receptacle in the original position.

Clean the Océ VarioPrint® 1055/65/75

Introduction

You must keep the glass platen clean. If the glass platen is dirty, the quality of the output and the process of original transport decreases.

If necessary, clean the outside of the machine with a damp cloth. You can use a solution of soap.



Attention: Do not use a solution that contains alcohol to clean the operator panel. You can damage the materials of the Océ VarioPrint® 1055/65/75 .



Attention: If you spill any toner, read the Safety Data Sheets for instructions on how to remove the toner.

Cleaning the platen of the Océ VarioPrint® 1055/65/75

1. Make a solution of soap and warm water.
You can also use Océ Cleaner O to clean the platen.
2. Use a cloth, moistened with the soapy water or the Océ Cleaner O solution, to clean the platen.
3. Dry the platen with a dry clean cloth.
Make sure the platen is dry before a job is started.

Cleaning the outside and operating panel of the Océ VarioPrint® 1055/65/75

1. Make a solution of soap and warm water.
2. Use a cloth, moistened with the soapy water, to clean the outside and operating panel.
3. Dry the Océ VarioPrint® 1055/65/75 with a dry clean cloth.
Make sure the parts of the Océ VarioPrint® 1055/65/75 are dry before a job is started

Shut down the Network Printer system


Introduction

You can shut down the system, for example to move the Océ VarioPrint® 1055/65/75 to another room. This procedure makes the system shut down in a controlled way.


Before you begin

- 1. Make sure that no job is announced or in progress.
- 2. Enter the Key operator system ([see ‘Enter or quit the key operator system’ on page 32](#)).

Illustration

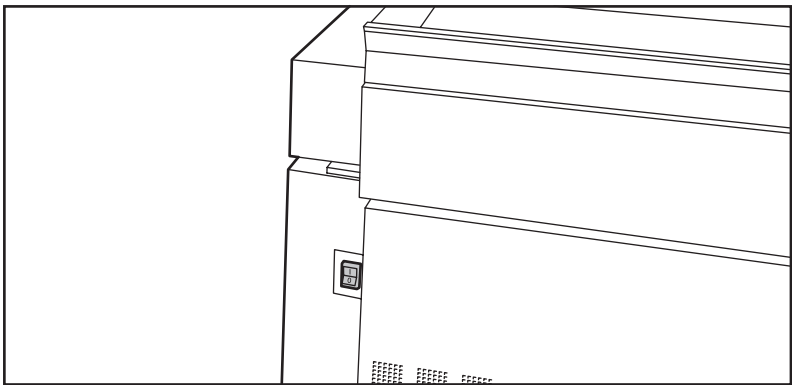

[107] The power switch

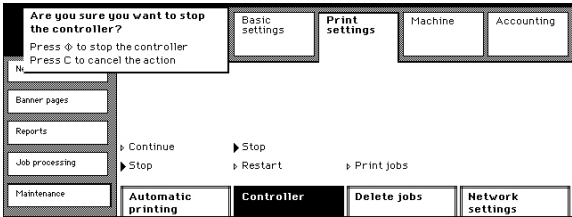

[108] Stop the controller

How to shut down the Network Printer system


- 1. Enter the Key Operator System.
- 2. Press the 'Print settings' key.
- 3. Select the 'Maintenance' tab.
- 4. Press the 'Controller' key to select 'Stop'.
- 5. Press the power switch to the '0' position.

Shut down the Digital Copier system

Introduction

You can shut down the system, for example to move the Océ VarioPrint® 1055/65/75 to another room. This procedure makes the system shut down in a controlled way.

Illustration

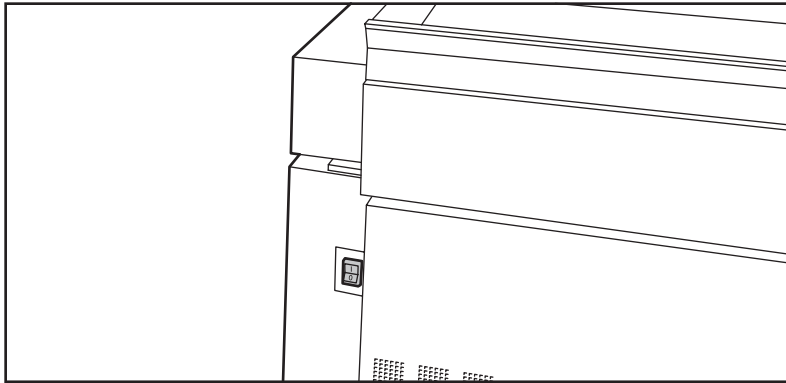

[109] The power switch on the Océ VarioPrint® 1055/65/75


How to shut down the Digital Copier system

1. Make sure that no jobs are in progress.
2. Press the power switch to the 'O' position.

Replace the removable hard disk

Introduction

The Océ VarioPrint® 1055/65/75 has configurations with a removable hard disk. You can replace the disk.

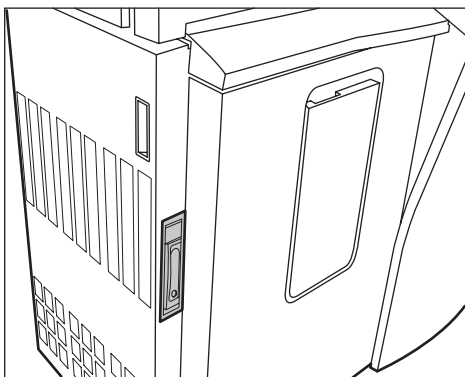


[110] The location of the removable hard disk

Before you begin


Make sure that you have the key to unlock the removable hard disk

How to replace the removable hard disk


1. Turn the key counter-clockwise to unlock the removable hard disk.

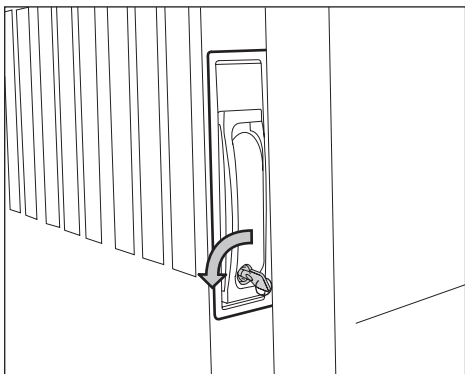

2. Pull the handle of the removable hard disk.

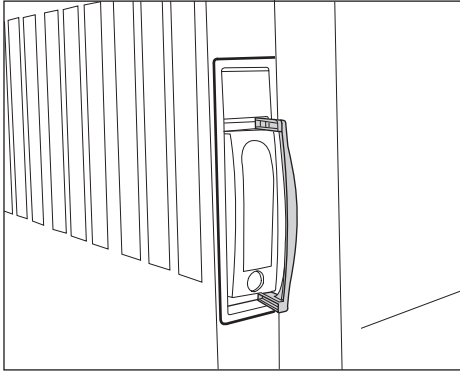

- 3.** Pull out the removable hard disk.

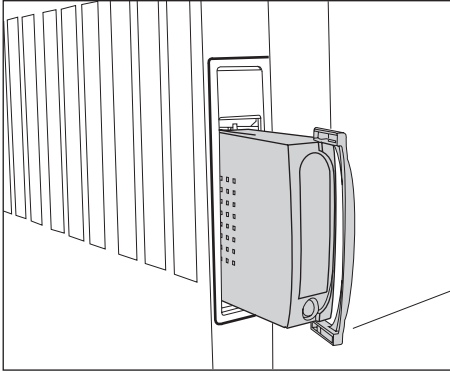

- 4.** Insert a new removable hard disk. Push down the handle and lock the removable hard disk.

Chapter 16

Clearing paper jams



Clearing paper jams

Introduction

If a paper jam occurs, the Océ VarioPrint® 1055/65/75 reports the problem. You can instruct the user what to do.

- Give instructions for clearing the paper jam; or
- call the key operator.

If the paper-compartment door is locked, the user must call the key operator. When the paper-compartment door is not locked, you can decide if the Key operator must be called when a paper jam occurs.


The Océ VarioPrint® 1055/65/75 gives the users instructions on how to clear the paper jam. The graphics indicate in which part of the Océ VarioPrint® 1055/65/75 the paper has stopped.

The instruction shows the grips, the covers and the doors of the Océ VarioPrint® 1055/65/75 . You must lift, press or open these parts to move the units and to reach the jammed paper.

The instructions guide you through a sequence of steps to correct the problem. If the jams occur in more than one location, the message box continues to give instructions until all paper jams have been cleared.

When the paper jam has been cleared, new instructions follow for continuing the job.

Illustration

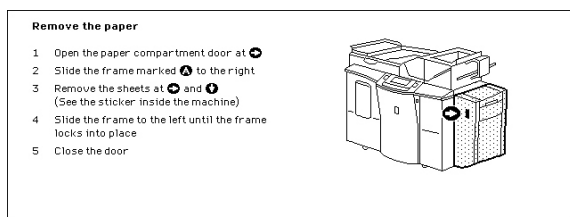

[114] User Screen Instructions for clearing a paper jam

Clearing a paper jam

1. Read the instructions on the display screen.
2. Follow the instructions.

Check

Check to see that the paper jam has been cleared.


Clear the staple jams

Introduction

If a staple jam occurs, the stapler does not work correctly.

Follow the instruction how to add the staples. First, access the stapler unit. Then, remove the staples from the unit and check the staple cartridge. If the staple cartridge caused the problem, keep the cartridge. Give the cartridge to Océ Service during the service technician's next visit. Finally, replace the staple cartridge and close the stapler unit.

Illustration

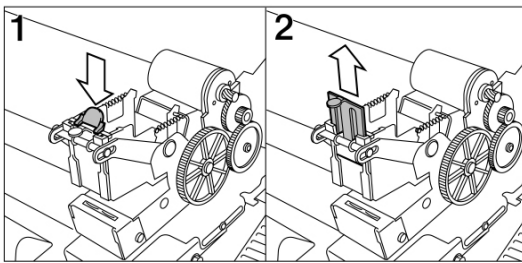

[115] Instructions for Clearing a Staple Jam

Removing jammed staples

1. At the right, push the green lever backwards.
2. At the left, raise the green lever and lift the stapler strip.
3. Remove any jammed staples.
4. Lower the stapler strip.
5. Slide the staple cartridge in the stapler unit until the cartridge clicks into place.

Check

Make sure that the stapler works correctly.

Chapter 17

Troubleshooting for the Network Printer



Stop automatic printing

Introduction

You can stop automatic printing, to allow the processing of copy, mailbox or scan jobs. The automatic print jobs remain in the print queue. To resume the printing of the automatic print jobs, restore the setting in the key operator system.

The users can still initiate automatic print jobs when automatic printing has been stopped.

Before you begin

Enter the Key operator system (see [‘Enter or quit the key operator system’ on page 32](#)).




Note: *The Océ VarioPrint® 1055/65/75 allows you to prevent automatic printing, so that all print jobs are stored in the mailbox.*

Controlling automatic printing

- 1. Press the 'Print settings' key.
- 2. Select the 'Maintenance' tab.
- 3. Press the 'Automatic printing' key to select 'Stop' or 'Continue'.

Illustration

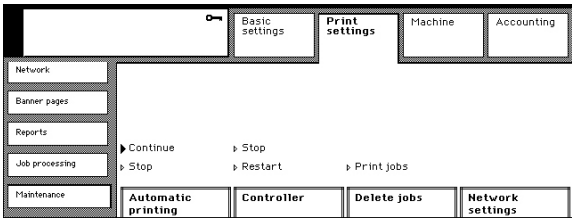

[116] Stop automatic printing

Check

- 1. Exit the key operator system.
- 2. To check the selection, start a print job.
Enter the settings for an automatic print job in the Océ VarioPrint® 1055/65/75 printer driver.
The automatic print job is not printed until you again change the setting to continue the automatic printing.

Change the account-log mode

Introduction

The account-log feature traces and records the job information. The Account-log feature is job-based and does not require any access control. The information is stored and can be downloaded when you run the Océ System Configuration. When a job is ready, the information about the job is stored on the controller.

The Account-log system has two modes to manage the job information storage when the job processing stops.

Print the System log file, for information about any errors that have occurred.

To change the account-log mode, proceed as follows:


When the job processing is stopped, the machine automatically sets the mode to 'Hold jobs'.

The mode 'Hold jobs' is also selected when the machine is switched off and on again.

Before you begin

Enter the Key operator system (see [‘Enter or quit the key operator system’](#) on page 32).

Illustration

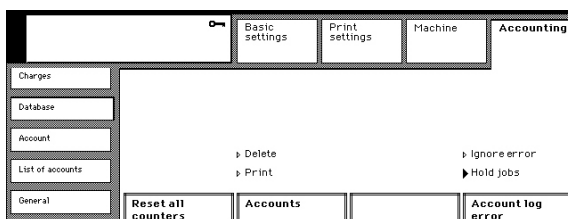

[117] Change the account-log mode

Changing the account-log mode

1. Press the 'Accounting' key.
2. Select the 'Database' tab.
3. Press the 'Account log error' key to select 'Ignore error' or 'Hold jobs'.

Account-log mode	Result
'Hold jobs'	The default setting. When the job processing stops, the recording of the job information continues until 25 jobs are done. Any subsequent jobs are prevented and a message is displayed. To enable new jobs, change the mode to 'Ignore error'
'Ignore error'	When the job processing stops, the recording of the job information continues until 25 jobs are done. Then, any subsequent jobs result in replacing the earliest of the 25 stored jobs with the new job information.

Check

- 1. Exit the key operator system.
- 2. Check to see that the machine behaves according to your needs.

Restart the controller


Introduction

You are requested to restart the controller to solve some errors. If an error occurs, the Océ VarioPrint® 1055/65/75 reports that a restart of the controller is necessary.

Before you begin

Enter the Key operator system (see [‘Enter or quit the key operator system’ on page 32](#)).

Illustration

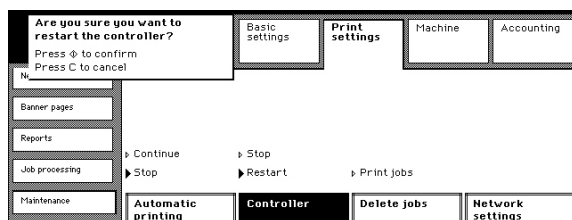

[118] Restarting the controller

How to restart the system

1. Press the 'Print settings' key.
2. Select the 'Maintenance' tab.
3. Press the 'Controller' key to select 'Restart'.

Check

1. Quit the key operator system.
2. To check, make sure that the problems have been solved.

Delete the jobs

Introduction

If there are problems with the job transfer, an excessive load can be placed on the system. You can delete the jobs to regain space.


Before you begin

Enter the Key operator system (see [‘Enter or quit the key operator system’](#) on page 32).




Attention: You cannot reverse the delete actions.

Illustration

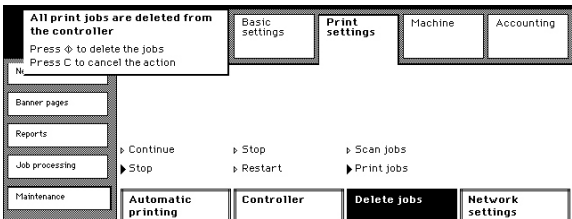

[119] Delete the scan jobs

 Deleting the jobs

1. Press the 'Print settings' key.
2. Select the 'Maintenance' tab.
3. Press the 'Delete jobs' key to select 'Print jobs' or 'Scan jobs'.
4. Press the start key  to confirm.

Check

1. Exit the key operator system.
2. Check to insure that the problems have been solved.

Restoring the Network Settings


Introduction

Connection from a remote workstation to the system can be lost because the changed network configuration does not work. The former network settings are retained in the system memory. You can restore the former network settings through the Key operator system.

Before you begin


Enter the Key operator system (see [‘Enter or quit the key operator system’](#) on page 32).

Illustration

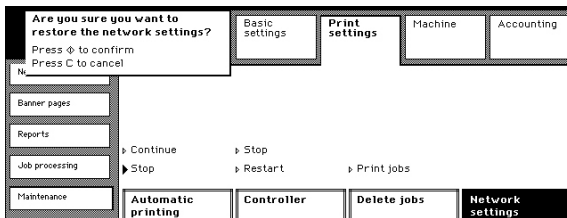

[120] Restoring the Network Settings

How to restore the network settings

1. Press the 'Print settings' key.
2. Select the 'Maintenance' tab.
3. Press the 'Network settings' key.
4. Press the Start key  to confirm.

Check

1. Exit the key operator system.
2. Check to insure that the problems have been solved.

Appendix A

Specifications




Product Specifications

Feature	Specification
Process	Organic photo conductor Océ Copy Press technology Océ Image Logic 600 dpi LED digital copying
Scan speed	Océ VarioPrint® 1055/65/75 54 pages / minute
Print speed	Océ VarioPrint® 1055: 55 A4/Letter 8.5x11 pages / minute, 1-sided or 2-sided Océ VarioPrint® 1065: 62 A4/Letter 8.5x11 pages / minute, 1-sided or 2-sided Océ VarioPrint® 1075: 72 A4/Letter 8.5x11 pages / minute, 1-sided or 2-sided
Resolution	Scan: 300 x 400 dpi Print: 600 x 600 dpi
Warm-up time	8 minutes
Machine memory	128 Mb minimum
Zoom	25% minimum 400% maximum

Input Trays and Output Bins

The input trays and output bins on your machine

The input trays contain the paper you can print or copy on. The output bins receive your copies or prints (see *'The machine parts'* on page 16).

: You can have a machine without a finisher, a paper tray 3 or paper tray 4.

Specifications for paper tray 1, 2 and 3

Sheet capacity (80 g/m ²)	Media sizes Europe	Media sizes USA	Weight
500	A3 (Only for paper tray 1 and 2) A4 A5 Commercial Folio Foolscap Quarto	Tabloid 11x17 (Only for paper tray 1 and 2) Legal 8.5x13 Legal 8.5x14 Legal Gov 8.5x12 Letter Gov 8.5x10 Letter 8.5x11 US-Gov 8x10.5 US-Std 5.5x8.5	60 - 170 g/m ²

Remember that:

- You can use perforated paper in the trays, with a maximum of 5 holes.
- You can use the 120 - 170 g/m² paper as covers or as a single sheet for a job with only 1 set.
- The machine is configured for Europe or USA paper sizes.
- Paper tray 1 is adjustable by the user.
Paper tray 2 and 3 are adjustable by Océ Service.
- Refer to the media specifications for more information about media formats and sizes (see *'Media'* on page 163).

Specifications for tray 4

Sheet capacity (80 g/m ²)	Media sizes Europe	Media sizes USA	Weight
2200	A4	Letter 8.5x11	60 -120 g/m ²

Remember that:

- You can use perforated paper in the tray, with a maximum of 5 holes.

- The machine is configured for Europe or USA paper sizes.
- Refer to the media specifications for more information about media formats and sizes (see ‘*Media*’ on page 163).

Specifications for special feeder

Sheet capacity	Media sizes Europe	Media sizes USA	Weight
1	A4 (SEF and LEF) Folio Foolscap A3	Letter 8.5x11 (SEF and LEF) Legal 8.5x13 Legal 8.5x14 Tabloid 11x17	50 -200 g/m ²

Remember that:

- You can use perforated paper in the special feeder.
- The machine is configured for Europe or USA paper sizes.
- You can use printed paper in the special feeder if the correct ink is used. Contact your local Océ organization for the ink specifications.


Specifications for the output bin

Output	Capacity (80 g/m ²)	Media sizes Europe	Media sizes USA	Weight
Finisher	650 sheets no staple or 1000 sheets no staple, depending on configuration	A4	Letter 8.5x11	75 - 170 g/m ²
Multi-size bin	450 minimum	A5 minimum A3 maximum	US Std 5.5x8.5 minimum Tabloid 11x17 maximum	75 - 170 g/m ²
Error bin		A5 minimum A3 maximum	US Std 5.5x8.5 minimum Tabloid 11x17 maximum	75 - 170 g/m ²
Stapler	50 sheets	A4	Letter 8.5x11	80 g/m ² maximum
	35 sheets	A4	Letter 8.5x11	80 -120 g/m ²

Remember that:

- The recommended capacity, size and weight specifications enable a paper process without problems. Do not exceed the recommended ranges and limits.
- Refer to the media specifications for more information about media formats and sizes (see '[Media](#)' on page 163).

Originals to use

Originals	Input	Specifications
Sizes	Platen	297 x 432 mm maximum
	Automatic document feeder	140 x 203 mm minimum 297 x 432 mm maximum  Note: <i>The Océ VarioPrint® 1055/65/75 permits the use of originals with dimensions that are not configured on the machine. However, the automatic document feeder cannot detect these sizes. You must adjust the enlargement or reduction, to copy or scan these originals.</i>
Weights	Platen	10 kg maximum
	Automatic document feeder	75 A4/Letter 8.5x11 or A5/Us Std 5.5x8.5 sheets (80 g/m ²) 50 A4/Letter 8.5x11 or A5/Us Std 5.5x8.5 sheets (120 g/m ²) 35 A3/Tabloid 11x17 sheets (80 g/m ²)
Types	Platen	Any type of original
	Automatic document feeder	Slightly curled Not damaged originals 1-sided or 2-sided Perforated 2 or 4 holes



Note: *Do not use transparent originals in the automatic document feeder.*

Media

Media sizes for the European configured Océ VarioPrint® 1055/65/75

[35] European media sizes

Size (mm)	Media name	Orientation	Use in tray	Use in special feeder
148.5 * 210	A5	SEF	1, 2 and 3	No
203.2 * 254	Quarto	SEF	1, 2 and 3	No
203 * 330	Foolscap	SEF	1, 2 and 3	Yes
210 * 270	Commercial	SEF	1, 2 and 3	No
210 * 297	A4	LEF	1, 2, 3 and 4	Yes
		SEF	1, 2 and 3	Yes
210 * 330	Folio	SEF	1, 2 and 3	Yes
297 * 420	A3	SEF	1 and 2	Yes

Media sizes for the US configured Océ VarioPrint® 1055/65/75

[36] US media sizes

Size (inch)	Media name	Orientation	Use in tray	Use in special feeder
5.5 * 8.5	US Std 5.5x8.5	SEF	1, 2 and 3	No
8 * 10.5	US Gov 8x10.5	SEF	1, 2 and 3	No
8.5 * 10	Letter Gov 8.5x10	SEF	1, 2 and 3	No
8.5 * 11	Letter 8.5x11	LEF	1, 2, 3 and 4	Yes
		SEF	1, 2 and 3	Yes
8.5 * 13	Legal 8.5x13	SEF	1, 2 and 3	Yes
8.5 * 14	Legal 8.5x14	SEF	1, 2 and 3	Yes
11 * 17	Tabloid 11x17	SEF	1 and 2	Yes

Océ materials for the paper trays

- Océ Red Label Paper
- Océ Office Standard Paper
- Océ Recycled Label Paper.
- Océ Top Labels.
- Océ Coloured Labels.
- Océ Parchment Paper.
- Océ Top Coated Paper.
- Océ Embossed Coloured Paper.



Note: Refer to the Océ web site www.oce.com for the complete overview of supplies.



Note: Make sure that you select the paper weight recommended for the paper trays. If the paper weight is more than 170 g/m², use the special feeder.

Materials for the special tray

- Océ Top Labels CD White Opaque 2/A4.
- Océ Clear Film Self-adhesive.
- Océ Overhead Film B&W MC 110/111//210.



Note: Refer to the Océ web site www.oce.com for the complete overview of supplies.

Appendix B

Addresses



Addresses of local Océ organisations

<p>Océ-Australia Ltd. P.O. Box 363 Ferntree Gully MDC Vic 3165 Australia http://www.oce.com.au/</p>	<p>Océ-Österreich GmbH Postfach 95 1233 Vienna Austria http://www.oce.at/</p>
<p>Océ-Belgium N.V./S.A. J. Bordetlaan 32 1140 Brussel Belgium http://www.oce.be/</p>	<p>Océ-Brasil Comércio e Indústria Ltda. Av. das Nações Unidas, 11.857 Brooklin Novo São Paulo-SP 04578-000 Brasil http://www.oce-brasil.com.br/</p>
<p>Océ-Canada Inc. 4711 Yonge Street, Suite 1100 Toronto, Ontario M2N 6K8 Canada http://www.oce.ca/</p>	<p>Océ Office Equipment (Beijing) Co., Ltd. Xu Mu Cheng Chaoyang District Beijing 100028 China http://www.oce.com.cn/</p>
<p>Océ-Czech Republic Ltd. Hanusova 18 140 21 Praha 4 Czech Republic http://www.oce.cz/</p>	<p>Océ-Danmark a/s Vallensbækvej 45 2605 Brøndby Denmark http://www.oce.dk/</p>
<p>Océ Finland OY Valkjärventie 7 D, PL 3 02130 Espoo Finland http://www.oce.fi/</p>	<p>Océ-France S.A. 32, Avenue du Pavé Neuf 93161 Noisy-le-grand, Cedex France http://www.oce.fr/</p>
<p>Océ-Deutschland GmbH Solinger Straße 5-7 45481 Mülheim/Ruhr Germany http://www.oce.de/</p>	<p>Océ-Hong Kong and China head office 12/F 1202 The Lee Gardens 33 Hysan Avenue Causeway Bay Hong Kong http://www.oce.com.hk/</p>

<p>Océ-Hungaria Kft. 1241 Budapest Pf.: 237 Hungary http://www.oce.hu/</p>	<p>Océ-Ireland Ltd. 3006 Lake Drive Citywest Business Campus Saggart Co. Dublin Ireland http://www.oce.ie/</p>
<p>Océ-Italia S.p.A. Strada Padana Superiore 2/B 20063 Cernusco sul Naviglio (MI) Italia http://www.oce.it/</p>	<p>Océ Japan Corporation 3-25-1, Nishi Shinbashi Minato-Ku Tokyo 105-0003 Japan http://www.ocejapan.co.jp/</p>
<p>Océ-Belgium S.A. Rue Astrid 2/A 1143 Luxembourg-Belair http://www.oce.lu/</p>	<p>Océ Malaysia Sdn. Bhd. #3.01, Level 3, Wisma Academy Lot 4A, Jalan 19/1 46300 Petaling Jaya Selangor Darul Ehsan Malaysia http://www.ocemal.com.my/</p>
<p>Océ-Mexico S.A. de C.V. Prolongación Reforma 1236, 4to Piso Col. Santa Fé, Del. Cuajimalpa C.P. 05348 México, D.F. México http://www.oceusa.com/</p>	<p>Océ-Norge A.S. Postboks 4434 Nydalen Gjerdrums vei 8 0403 Oslo Norway http://www.oce.no/</p>
<p>Océ-Poland Ltd. Sp.z o.o. ul. Bitwy Warszawskiej 1920 r. nr. 7 02-366 Warszawa Poland http://www.oce.com.pl/</p>	<p>Océ-Lima Mayer, S.A. Av. José Gomes Ferreira, 11 Piso 2 - Miraflores 1497-139 Algés Portugal http://www.oce.pt/</p>
<p>Océ Singapore Pte Ltd. 190 MacPherson Road #03-00 Wisma Gulab Singapore 348548</p>	<p>Océ Printing Systems (PTY) Ltd. P.O.Box 629 Rivonia 2128 South Africa</p>

Océ España SA Business Park Mas Blau Osona, 2 08820 El Prat de Llobregat Barcelona Spain http://www.oce.es/	Océ-Svenska AB Sollentunavägen 84 191 27 Sollentuna Sweden http://www.oce.se/
Océ-Schweiz AG Sägereistrasse 10 CH8152 Glattbrugg Schweiz http://www.oce.ch/	Océ (Thailand) Ltd. B.B. Building 16/Floor 54 Asoke Road Sukhumvit 21 Bangkok 10110 Thailand
Océ-Nederland B.V. P.O.Box 800 5201 AV 's-Hertogenbosch The Netherlands http://www.oce.nl/	Océ (UK) Limited Océ House Chatham Way Brentwood, Essex CM14 4DZ United Kingdom http://www.oce.co.uk/
Océ North America Inc. 5450 North Cumberland Avenue Chicago, IL 60656 USA http://www.oceusa.com/	



Note: The web site <http://www.oce.com> gives the current addresses of the local Océ organizations and distributors.



Note: The addresses of local Océ organizations for information about the Wide Format Printing Systems and the Production Printing Systems can be different from the addresses above. Refer to the web site <http://www.oce.com> for the addresses you need.

Index

- status 123
- + status
 - change 123
 - description 50
 - Digital Copier 60
 - Network Printer 54
- 2-sided page
 - Digital Copier 64
 - Network Printer 56
- A**
- A3/Tabloid 11x17 page
 - Digital Copier 64
 - Network Printer 56
- access
 - stapler 136
 - to Digital Copier machine 62
 - to Network Printer machine 52
 - to paper trays 70
 - to trays 71
- access-secured
 - automatic printing 50
 - Digital Copier machine 62
 - Digital Copier system 60
 - Network Printer machine 52
 - Network Printer system 50
 - system 118
- Account log 151
- account number
 - description 121
 - in accounts database 116
- Accounting system
 - description 116
 - related to Digital Copier security 62
 - related to Network Printer security 52
 - to support access control 116
- Accounting system Digital Copier 60
- Accounting system Network Printer 50
- accounts database
 - description 116
 - file 103
 - new record 54
 - record 116
 - sequence of records 125
- add
 - staple cartridge 137
 - toner 132
- announced delay
 - description 93
 - timer 94
- appendix sheets 76
- applications to configure the Network Printer system 20
- assign PIN 122
- authorization
 - in accounting system 116
 - to access the Digital Copier 60
 - to access the Network Printer 50
 - to enter mailbox 91
- Authorize print account 54
- AutoIP 38
- automatic document feeder
 - description 16, 24
- automatic print job
 - canceled 90
 - define the printing delay for 94
 - delete 154
 - in mailbox 91
 - send to mailbox 90
 - timers to print 93
- automatic printing
 - Copy control device 51
 - secured 54
 - stop or continue 150
- automatic switch off 110, 113
- available keys
 - Digital Copier 29
 - Network Printer 21
- B**
- banner page
 - automatic jobs 87
 - description 87
 - mailbox jobs 87
- blank page
 - Digital Copier 64
 - Network Printer 56
- Bookcopier 10
- BootP 38
- Bottom keys

description Digital Copier	29
description Network Printer	21
C	
CD-rom	14
change	
account number	121
Account-log mode	151
announced delay	94
default job settings	42
default margin shift	81
display language	44
Folio size	78
job-page limit	124
Key operator PIN	34
output of copy jobs from platen	82
PIN	122
print job delay	94
reset time	45
sequence order of user accounts	125
stapler empty mode	48
status of a user account	123
charge special pages	
Digital Copier	64
Network Printer	56
charges	
Copy control device (Network Printer)	58
Copy control device connected (Digital Copier)	
66	
for job pages	98
check	
machine memory	100
machine number	101
clean the Océ VarioPrint, 1055/65/75	139
clear	
paper jam	146
staple jam	148
close stapler unit	137
closed status	123
Configuration	
diagnostics	102
methods Network Printer	20
configuration and maintenance	
manual	11
configuration report	
description	102
machine memory information	100
print	102
connection	
controller to machine	151
restore network settings	155
continue automatic printing	150
control	
access to special tray	73
access to the paper trays	71
automatic print jobs	91
jobs without an Océ ticket	92
output of copy jobs from platen	82
controller	
lost connection	151
restart	153
stop	140
copier user account	117
copies in accounts database	116
Copy / Print counters	98
Copy control device	
access security of the Digital Copier	60
access security of the Network Printer	51
account	117
enable (Digital Copier)	66
enable (Network Printer)	58
interrupt function	84
copy job	
Copy control device (Network Printer)	58
Copy control device connected (Digital Copier)	
66	
from platen	82
Correction key	
description Digital Copier	29
description Network Printer	21
counter on machine	98
covers	76
create	
new user account record on the Digital Copier .	
120	
new user account record on the Network Printer	
119	
D	
default	
Account log setting	151
gateway	38
job settings	42
Key operator PIN	34
margin shift	81
memory size	100
operating mode	86
printing delay times	94
reset time	45
Default usage	86

-
- define
 - access to Digital Copier machine 60
 - access to Network Printer machine 50
 - announced delay 94
 - banner pages 87
 - default operating mode 86
 - IP address information 38
 - job-page limit 124
 - paper trays for report jobs 76
 - print job delay 94
 - define job pages
 - Digital Copier 64
 - Network Printer 56
 - delete
 - all user accounts 129
 - print jobs 154
 - scan jobs 154
 - user account 128
 - DHCP 38
 - Digital Copier
 - about 28
 - access security 60
 - description 10
 - description in Configuration and maintenance manual 11
 - operator panel 29
 - Digital Copier user
 - external 66
 - internal 66
 - disable
 - automatic print jobs 91
 - automatic switch off 113
 - Copy control device connected to Digital Copier 67
 - Copy control device connected to Network Printer 59
 - Interrupt mode 84
 - sleep mode 109
 - special feeder 72
 - display language 44
 - display screen
 - description Digital Copier 29
 - description Network Printer 21
- E**
- empty staple receptacle 138
 - enable
 - automatic print jobs 91
 - Copy control device connected to Digital Copier 67
 - Copy control device connected to Network Printer 59
 - special feeder 73
 - energy consumption
 - Digital Copier 110
 - Network Printer 106
 - energy save modes
 - Digital Copier 110
 - Network Printer 106
 - energy save timer
 - Digital Copier 110
 - Network Printer 106
 - enter
 - Key operator system 32
 - key operator telephone number 47
 - error
 - Account log error 151
 - call key operator 47
 - database 123
 - lost connection 155
 - restart controller 153
 - system log report 102
- F**
- F4 132
 - fault diagnostics 102
 - fingerprint sensor 21
 - fingerprinting 90
 - finisher
 - bin 16, 24
 - output copy jobs from platen 82
 - Folio size 78
 - Foolscap folio 78
 - front door 16, 24
- H**
- Hold jobs 151
- I**
- ignore
 - error 151
 - telephone number 47
 - ink specifications 159
 - input tray specifications 159
 - instruction about paper jam 146
 - Instruction cards 14
 - Interrupt function 84
 - invalid user account 123
-

IP address

assignment	38
default gateway	38
of system	38
subnet mask	38

J

job

charges Digital Copier	64
charges Network Printer	56
default settings	42
information in account log	151
interrupted	84
pages	98
transfer problem	154

job page

counter	126
limit	124

job pages

define charges of	64
of system accounts	117
read counters	98

Jobs without an Océ ticket

K

Key operator

access to paper tray	71
account	117
account number	117
call to clear paper jam	146
change PIN of	34
clear the paper jams	70
default PIN	117
manual	14
refill the paper trays	70
system	32
tasks	13
telephone number	47

Key operator system

define print jobs	90
enter	32
enter or quit	32
Network Printer	20
quit	33

key switch

machine	36
paper compartment	70

L

language in display

limit

energy save mode	113
in accounts database	116
job pages	126
job pages Digital Copier	60
job pages Network Printer	50
number of job pages	124

link the paper trays

low power mode

Digital Copier	110
Network Printer	106

low power timer

Digital Copier	111
Network Printer	107

M

machine

memory	100
number	101

mailbox

automatic print jobs in	91
delete jobs in	154
description	89
job	90
protection	50
security	90
to store jobs without Océ ticket	92

Maintenance card

margin shift

material

in paper tray	159
sizes and formats	163
specifications	159

media

in paper tray	159
sizes	163
sizes and formats	163
specifications	159

memory

machine	100
system	155

message

announce automatic print job	93
Call key operator	47
call key operator	70
restart controller	153
to clear paper jam	146

multi-size bin

-
- description 16, 24
 - N**
 - Network Printer
 - about 20
 - access security 50
 - description 10
 - description in Configuration and maintenance manual 11
 - operator panel 21
 - Network Printer user
 - external 58
 - internal 58
 - Network settings 155
 - No reset 45
 - Numeric keys
 - description Digital Copier 29
 - description Network Printer 21
 - O**
 - Océ
 - cleaner O 139
 - configuration methods Network Printer 20
 - job settings 42
 - job ticket 92
 - print features 92
 - printer driver 92
 - System Configuration 20
 - Océ Service
 - change energy save timer Digital Copier .. 111
 - change energy save timer Network Printer 107
 - charges for scan jobs 98
 - configure Copy control device of the Digital Copier 60
 - configure Copy control device of the Network Printer 51
 - configure energy save mode Digital Copier 110
 - configure energy save mode Network Printer . 106
 - disable automatic switch off 113
 - disable sleep mode 109
 - install Copy control device connected to Digital Copier 66
 - Install Copy control device connected to Network Printer 58
 - machine number request 101
 - wrong staple cartridge 148
 - Océ System Configuration
 - define IP address information 38
 - password 20
 - tasks System administrator 13
 - TouchTo Print configuration 90
 - Océ VarioPrint 1055
 - products 11
 - Océ VarioPrint, 1055 10
 - Océ VarioPrint, 1055 Bookcopier
 - description 10
 - machine parts 18, 26
 - Océ VarioPrint, 1055/65/75
 - cleaning 139
 - Digital Copier 10
 - machine parts 16, 24
 - Network Printer 10
 - support 14
 - Océ VarioPrint, 1065 10
 - Océ VarioPrint, 1075 10
 - off-line stapler
 - description 16, 24
 - replace cartridge 135
 - ON / OFF button 36
 - open status 123
 - operating mode
 - change default 86
 - default 86
 - operating temperature 36
 - original receiving bin 16, 24
 - output bin specifications 161
 - P**
 - paper
 - compartment 16, 24
 - jam 146
 - paper compartment
 - access to 70
 - description 16, 24
 - paper size specifications 162
 - paper tray
 - 1 78
 - access to 70
 - banner pages 87
 - for folio paper 78
 - linking 79
 - paper specifications 159
 - report jobs 76
 - specifications 159
 - supply 76
 - paper weight specifications 162
 - parts of Océ VarioPrint, 1055/65/75 16, 24
 - parts of the Océ VarioPrint, 1055 Bookcopier .. 18,
-

-
- 26
 - perforated paper 159
 - PIN
 - accounts database 116
 - change 122
 - enter Key operator system 32
 - Key operator 117
 - to enter the Digital Copier machine 60
 - to enter the Network Printer machine 50
 - user account 122
 - platen
 - cleaning 139
 - copy job 82
 - description 16, 24
 - description Océ VarioPrint, 1055 Bookcopier .
18, 26
 - Pocket mailbox 89
 - power switch 36
 - Digital Copier 141
 - Network Printer 140
 - print
 - accounts-database file 103
 - configuration report 102
 - file 92
 - queue 150
 - speed 10
 - system log report 102
 - user accounts 103
 - print job
 - Copy control device (Network Printer) 58
 - in mailbox 90
 - permission 90
 - print job delay
 - description 93
 - timer 94
 - printer driver 90
 - printing delay
 - change 94
 - description 93
 - prints in accounts database 116
 - product specifications 158
- Q**
- Quitting the Key Operator System 33
- R**
- read
 - copy and print counter 98
 - scan counter 98
 - total counter 99
 - register added toner 134
 - removable hard disk 142
 - remove jammed staples 148
 - replace removable hard disk 142
 - reset
 - job-page counters of a user account 126
 - job-page counters of all user accounts 127
 - time 45
 - restart controller 153
 - restore
 - default job settings 43
 - network settings 155
- S**
- S2 staples 135
 - Save current settings 42
 - scan
 - counter 98
 - module 101
 - scan counter 101
 - scan job
 - Copy control device (Network Printer) 58
 - delete 154
 - scanned page 56
 - scans in accounts database 116
 - Scroll wheel
 - description Digital Copier 29
 - description Network Printer 21
 - Scroll wheel key
 - description Digital Copier 29
 - description Network Printer 21
 - secure
 - access to Digital Copier machine 62
 - access to Network Printer machine 52
 - automatic printing 54
 - mailbox 90
 - separation sheets 76
 - sequence of user accounts 125
 - set
 - low power timer of Digital Copier 111
 - low power timer of Network Printer 107
 - sleep mode timer of Network Printer 107
 - switch off time 111
 - shut down
 - Digital Copier system 141
 - Network Printer system 140
 - size of media 163
 - sleep mode
 - description 106
-

-
- disable 109
 - sleep mode timer
 - Digital Copier 111
 - Network Printer 107
 - sloping side panel 18, 26
 - Smart mailbox
 - description 89
 - member 90
 - sort accounts by 125
 - special feeder
 - access 72
 - description 16, 24
 - materials for 164
 - paper specifications for 160
 - selection in display screen 72
 - specifications
 - input 159
 - material 159
 - originals 162
 - output 159
 - standard margin shift 81
 - staple
 - cartridge 135
 - jam 148
 - receptacle 138
 - storage 138
 - stapler
 - description 16, 24
 - empty 48
 - replace cartridge 135
 - stapler empty mode 48
 - Start key
 - description Digital Copier 29
 - description Network Printer 21
 - status
 - for automatic printing 54
 - in accounts database 116
 - user account 123
 - Status and system key
 - description Digital Copier 29
 - description Network Printer 21
 - stop
 - automatic printing 150
 - controller 140
 - stop automatic printing 150
 - Stop key
 - description Digital Copier 29
 - description Network Printer 21
 - subnet mask 38
 - switch off time 110
 - system
 - account 116
 - accounts 117
 - reports 102
 - restore network settings 155
 - transfer problem 154
 - System administrator
 - manual 14
 - tasks 13
 - system log report
 - description 102
 - print 102
- T**
- task
 - end user 13
 - Key operator 13
 - System administrator 13
 - telephone number of key operator 47
 - timer
 - printing delay 93
 - reset 45
 - toner
 - add 133
 - F4 132
 - level 132
 - prepare 133
 - registration 134
 - specification 132
 - Top keys
 - description Digital Copier 29
 - description Network Printer 21
 - total counter 99
 - TouchTo Print 90
 - tray
 - for appendix sheets 76
 - for banner pages 87
 - for covers 76
 - for separation sheets 76
 - materials for 163
 - specifications 159
 - turn on and off machine 36
 - tutorials 14
- U**
- USB port 21
 - USB stick 89
 - user
 - access the paper compartment 70
 - account 116
-

- in accounts database 116
 - report jobs 76
- user account
 - delete 128
 - for printing 50
 - information 103
 - job page limit 124
 - new record (Digital Copier) 120
 - number 121
 - PIN 122
 - sequence 125
 - valid 123
 - validate 118
- user account >
 - new record (Network Printer) 119

V

- valid user account 123

W

- Wizards key
 - description Digital Copier 29
 - description Network Printer 21
- www.oce.com downloads 14